F531E, F731E

User Manual

- CONTENT -

CHAPTER 1 AFETY INSTRUCTION....3

CHAPTER 2 SYSTEM REQUIREMENT & PRODUCT FEATURE....5

2.1. SYSTEM REQUIREMENT....5
2.2. PRODUCT FEATURE....6

CHAPTER 3 USING IP CAMERA VIA WEB BROWSER....7

3.1. WINDOWS WEB BROWSER....7
3.2. MAC WEB BROWSER....8

CHAPTER 4 USING IP CAMERA VIA MOBILE PHONE....10

4.1. MOBILE PHONE VIEWING....10
4.2. USING IP CAMERA VIA IPHONE....11

CHAPTER 5 MSN MESSENGER....12

CHAPTER 6 CONFIGURATION OF MAIN MENU....17

6.1. LIVE VIEW....17
6.2. SETTING....19
6.3. CLIENT SETTING....20
6.4. IMAGE SETUP....21

CHAPTER 7 SETTING-BASIC....22

7.1. SYSTEM....22
7.1.1. Information....22
7.1.2. Date/Time....22
7.1.3. Initialize....23
7.2. CAMERA....25
7.2.1. General....25
7.2.2. MPEG-4....26
7.2.3. MJPEG....29
7.3. NETWORK....30
7.3.1. INFORMATION....30
7.3.2. PPPoE(Point-to-Point Protocol over Ethernet)....31
7.3.3. DDNS(Dynamic DNS)....33
7.3.4. UPnP(Universal Plug and Play)....37
7.3.5. Bonjour....38
7.3.6. IP Notification....38

7.3.7. Messenger 40
7.4. SECURITY 42
7.4.1. Account 42
7.4.2. HTTPS 43

CHAPTER 8 SETTING-ADVANCE 44

8.1. FTP CLIENT 44
8.1.1. General 44
8.1.2. Alarm Sending 45
8.1.3. Periodical Sending 46
8.2. SMTP 48
8.2.1. General 48
8.2.2. Alarm Sending 50
8.2.3. Periodical Sending 51
8.3. HTTP EVENT 53
8.3.1. General 53
8.3.2. Alarm Sending 54
8.4. ALARM OUTPUT 57
8.5. SCHEDULE 59
8.6. ALARM INPUT 60
8.7. ALARM BUFFER 61
8.8. MOTION DETECTION 62
8.9. SYSTEM LOG 63

APPENDIX 64

A. FRAME-RATE AND BITRATE TABLE 64
B. STORAGE REQUIREMENT TABLE 66
C. TESTING SYSTEM SPECIFICATION 68
D. D1 PERFORMANCE OF 16 CHANNEL IP CAMERA 68

EUROPE – EU DECLARATION OF CONFORMITY 69

FEDERAL COMMUNICATION COMMISSION INTERFERENCE STATEMENT 70

Chapter 1 AFETY INSTRUCTION

➢ Before you use this product

This product has been designed with safety in mind. However, the electrical products can cause fires which may lead to serious body injury if not used properly. To avoid such accidents, be sure to heed the following.

➢ Legal Caution

Video and audio surveillance can be forbidden by laws that vary from country to country. Check the laws in your local region before using this product for surveillance purposes.

➢ Don't open the housing of the product

Don't try to open the housing or remove the covers which may expose yourself to dangerous voltage or other hazards.

➢ Don't use the accessories not recommend by the manufacturer

➢ Heed the safety precautions

Be sure to follow the general safety precautions and the “Operation Notice.”

➢ Operation Notice - Operating or storage location

Avoid operating or storing the camera in the following locations:

- Extremely hot or cold places
  (Operating temperature: 0 °C to + 50 °C [32 °F to 122°F])
- Exposed to direct sunlight for a long time, or close to heating equipment (e.g., near heaters)
- Close to water (e.g.,near a bathtub, kitchen sink, laundry tub)
- Close to sources of strong magnetism
- Close to sources of powerful electromagnetic radiation, such as radios or TV transmitters
- Locations subject to strong vibration or shock

➢ In case of a breakdown

In case of system breakdown, discontinue use and contact your authorized dealer.

➢ In case of abnormal operation

- If the unit emits smoke or an unusual smell,
- If water or other foreign objects enter the cabinet, or
- If you drop the unit or damage the cabinet:1 Disconnect the cable and the connecting cables. 2 Contact your authorized dealer or the store where you purchased the product.

➢ Transportation

When transporting the camera, repack it as originally packed at the factory or in materials of equal quality.

➢ Ventilation

To prevent heat buildup, do not block air circulation around the device.

➢ Cleaning

- Use a soft, dry cloth to clean the external surfaces of the device. Stubborn stains can be removed using a soft cloth dampened with a small quantity of detergent solution, then wipe dry.
- Do not use volatile solvents such as alcohol, benzene or thinners as they may damage the surface.

Chapter 2 SYSTEM REQUIREMENT & PRODUCT FEATURE

2.1. SYSTEM REQUIREMENT

We strongly recommend your computers follow our minimum requirements in order to use this IP-Camera normally. If computer level is lower than this, it might cause some problems.

Item	Requirements
CPU	Pentium 4 1600MHz (or equivalent AMD)
Graphic Card	64 MB RAM graphic cards(or equivalent on-board graphic cards)
RAM	512 MB
Operating System	Windows 98, Windows ME (Please see Note) Windows2000, 2003, XP, Vista, Mac OS X Leopard
Web Browser	Internet Explore 6 or later

Note:

1. If you are using Windows 98 or Windows ME, please install IP Installer before using WEB UI to ensure the system runs normally.

2. If you can't view the record video file, please install Xvid codec while installing Intelligent IP Installer. (For Windows 98, ME or 2000 server, the codec might not work properly. You'll need to download Xvid codec 1.0 from the internet.

3. Please always update the latest Windows component. (.Net Framework, Windows Media Player, Enhance ActiveX Security)

2.2. PRODUCT FEATURE

SYSTEM	
Resolutions	MPEG-4 / Motion JPEG / JPEG: 2 resolutions from 640x480 to 320x240 via API and configuration web page
Compressing format	MPEG-4 / Motion JPEG / JPEG
Frame Rate	MPEG-4: Up to 30 fps at 640x480 Motion JPEG: Up to 15 fps at 640x480
Image settings	Rotation: Mirror, Flip, Mirror Flip
	Brightness / Contrast / Saturation / Hue
	Overlay capabilities: time, date, text and privacy image
Shutter Time	1/7.5 ~ 1/120 sec.
Image snapshot	Yes
Video Recording	Yes
Full Screen Viewing	Yes
Digital Zoom	10x digital
Audio	Two-way (full / half duplex)
	Audio compression: G.711 PCM, 8kHz, 64kbit/s
Instant Messenger	Support MSN Live View
Mobile Phone Live View	Through 2.5 WAP, 3GPP, 3G Streaming, and 3G Browser
Alarm Sending	FTP Client / SMTP
Security	Password Protection / HTTPS encryption / WEP64/128 bit, WPA/WPA2-PSK
Alarm and Event Management	Input: alarm buffer, alarm input, motion diction Output: FTP/SMTP/HTTP Event
Supported protocols	Bonjour, TCP/IP, DHCP, PPPoE, ARP, ICMP, FTP, SMTP, DNS, NTP, UPnP, RTSP, RTP, HTTP, TCP, UDP, 3GPP/ISMA RTSP
Simultaneous Connection	Up to 5 users
Operating conditions	-30°C ~ 50 ℃ (-22℉ ~ 122 ℉)
HARDWARE	
Lens	F1.5, 4.0mm board lens (for F531E) / 4.3&6&8mm (selectable for F731E)
IR LEDs / Working Distance	8 φ LEDs x 21 (850nm) / 15M (for F531E) 8 φ LEDs x 36 (850nm) / 35M (for F731E)
Input / Output	Alarm Output Max 30W
Power	12V DC, 1A, Max 5W PoE Build-in IEEE 802.3af

Chapter 3 USING IP CAMERA VIA WEB BROWSER

3.1. WINDOWS WEB BROWSER

1. Start your web browser, and enter the IP address or host name of the IP camera in the Location / Address field of your browser.

Note :
If you only want to view the video without setting page, enter "http://<IP>/index2.htm" as your web URL.

2. Use the default account "admin" and default password "admin".

Note :
The default user name "admin" and the password are set at the factory for the administrator. You can change them in the Account Menu (Please check "Setting → Basic → Security → Account")

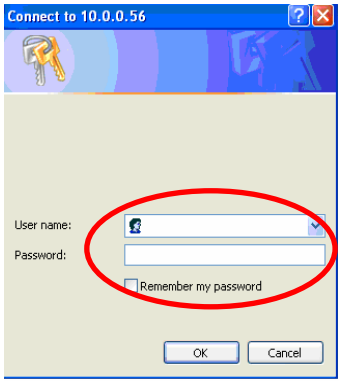

3. The monitor image will be displayed in your browser. In the far left side of main configuration are Setting, Client Setting, and Image Setup. For more details, you can check Chapter 6.2、Chapter 6.3 and Chapter 6.4.

3.2. MAC WEB BROWSER

1. Click the Safari icon, and enter the IP address of the IP camera in the Location / Address field of your browser.

Note :

If you only want to view the video without setting page, enter "http://<IP>/index2.htm" as your web URL.

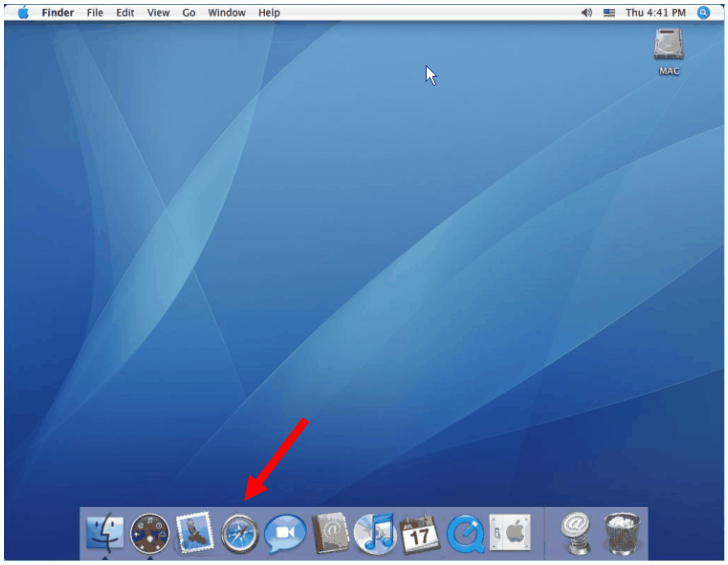

2. Use the default account "admin" and default password "admin".

Note :

The default user name "admin" and the password are set at the factory for the administrator. You can change them in the Account Menu (Please check "Setting → Basic → Security → Account")

3. The monitor image will be displayed in your browser. In the far left side of main configuration are Setting, Client Setting, and Image Setup. For more details, you can check Chapter 6.2、Chapter 6.3 and Chapter 6.4.

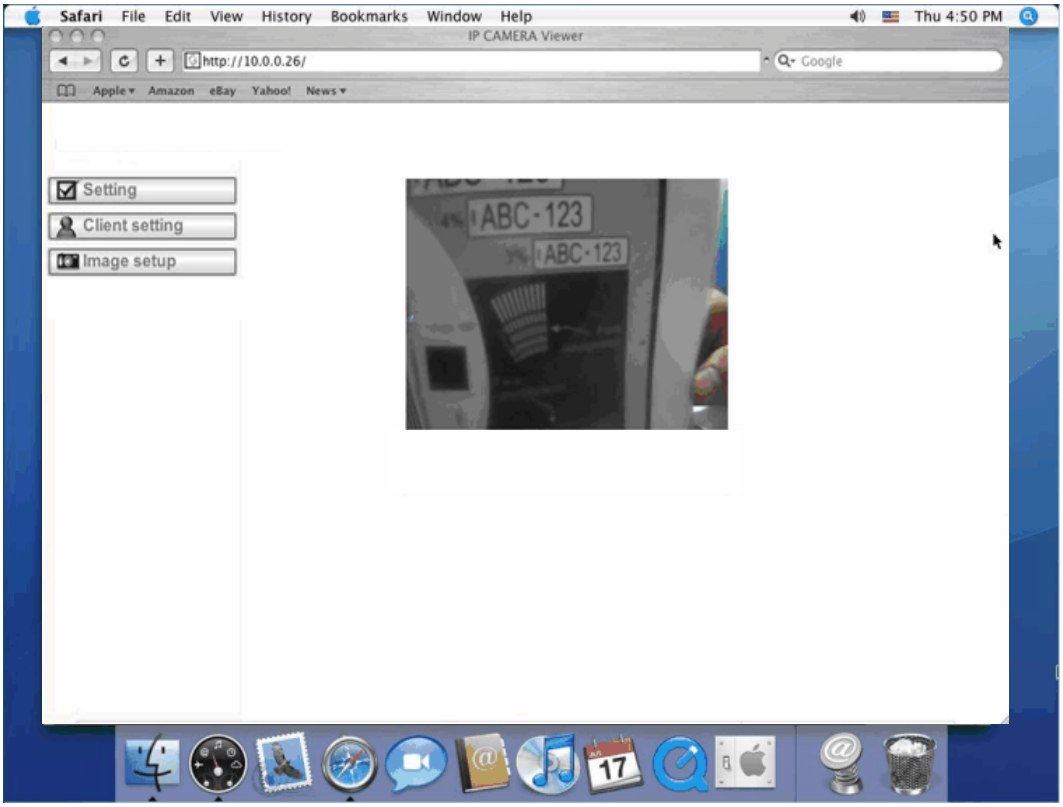

Chapter 4 USING IP CAMERA VIA MOBILE PHONE

4.1. MOBILE PHONE VIEWING

You can use Zavio Web User Interface via iPhone. Please follow the setting process below. Then you can use Zavio web UI via iPhone.

1. Select Safari function

2. Enter IP address in your web link.

3. Type name and password. Default value is admin / admin. Then click Login In

4. The Zavio User Interface and live image will show up in the middle of screen.

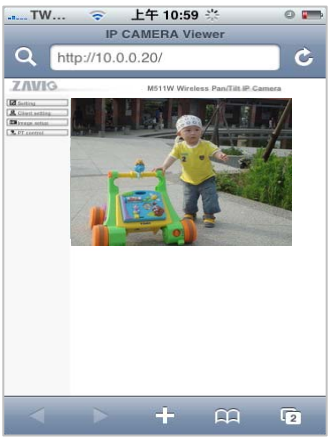

Note: It will show continuous snapshots not a real time video streaming. Therefore, the recording feature is disabled.

4.2. USING IP CAMERA VIA IPHONE

To use IP cameras via mobile phones, please make sure your RTSP is set to "On" (Default is "On"). To change the settings of IP cameras, **Please check "Settings → Basic → Camera → General."**

4.2.1. 3G Mobile Phone Streaming Viewing

For 3G mobile phone viewing, type " **rtsp://<IP>:<PORT>/video.3gp** " into your 3G Streaming Link. **<IP>** is the Public IP address of your IP camera; **<PORT>** is the RTSP port of your IP camera (Default value is 554.) Example: rtsp://100.10.10.1:554/video.3gp

Note:

You can also use RTSP clients (RealPlayer, VLn "rtsp://<IP>:<PORT>/video.3gp" as the Player URL.

4.2.2. 2.5G Mobile Phone WAP Viewing

For 2.5G mobile phone viewing, type "**http://<IP>/mobile.wml** " into your 2.5G WAP Browser. **<IP>** is the Public IP address of your IP camera.

4.2.3. 2.5G Mobile Phone Browser Viewing

For 2.5G mobile phone viewing, type "**http://<IP>/mobile.htm** " into your 2.5G Web Browser. **<IP>** is the Public IP address of your IP camera.

Chapter 5 MSN MESSENGER

Please see the following steps to set up the Messenger function.

1. Application of a new MSN account: You can download MSN software freely and create a **new MSN account** (**camera at home**) to use Microsoft Live Messenger.

2. Login Account and Password: Go to Setting→Basic→Network→Messenger , set the Messenger to "ON" . Then, **login in new account and password (Camera at home).**

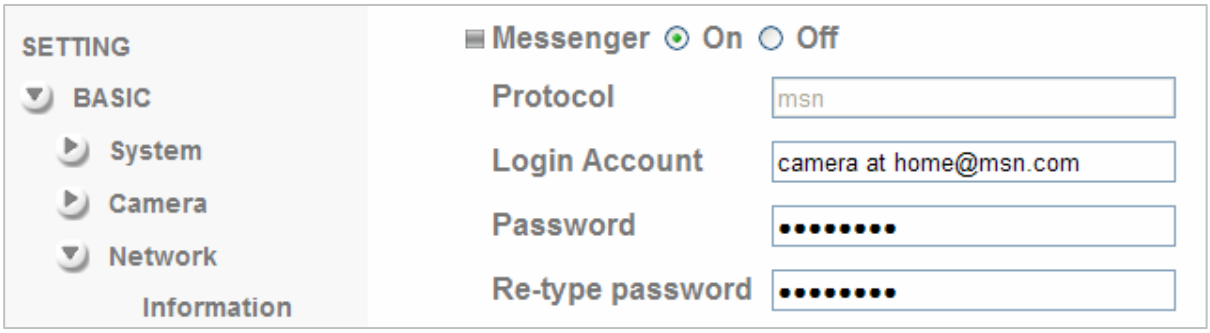

3. IP Notification: Choose "On" at the option of **IP Notification. If this feature switches On**, camera will send IP notification to the users who are allowed.

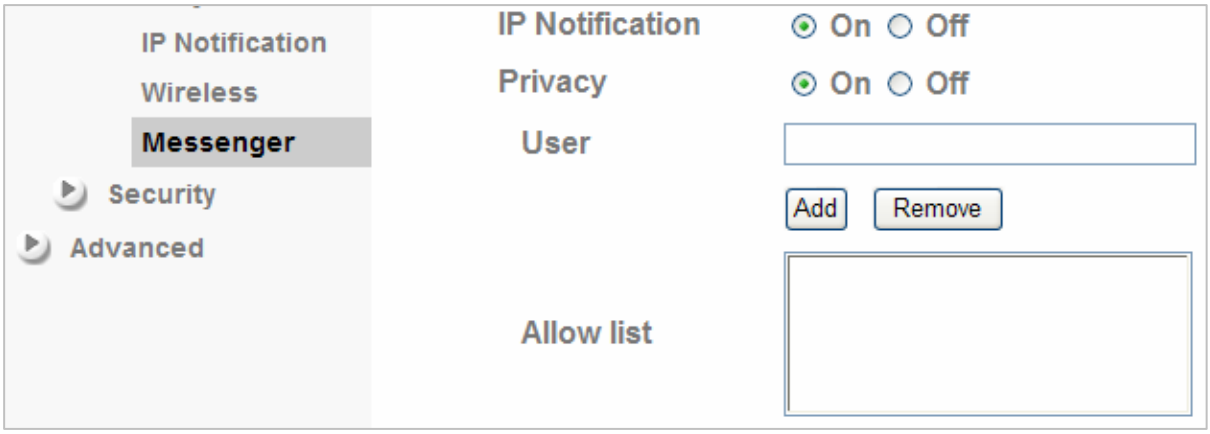

4. Privacy & User & Allow List: Choose "On" at the option of **Privacy**, then **User** column will appear and be able to build **Allow List**.

5. Log in Working Account: Use your working account to login in the Messenger software. Then, add the new MSN account (**camera at home**).

6. The **Camera at home** will show up with its Public IP and Private IP after enter "Ping" in the lower key-in column to show up with Public IP and Private IP. (If the option of IP Notification is "On.")

7. Click on the small **camera icon** . Then, choose "View a new contact's webcam".

8. The IP Camera will accept your invitation; the live video will show up in the right screen after few seconds.

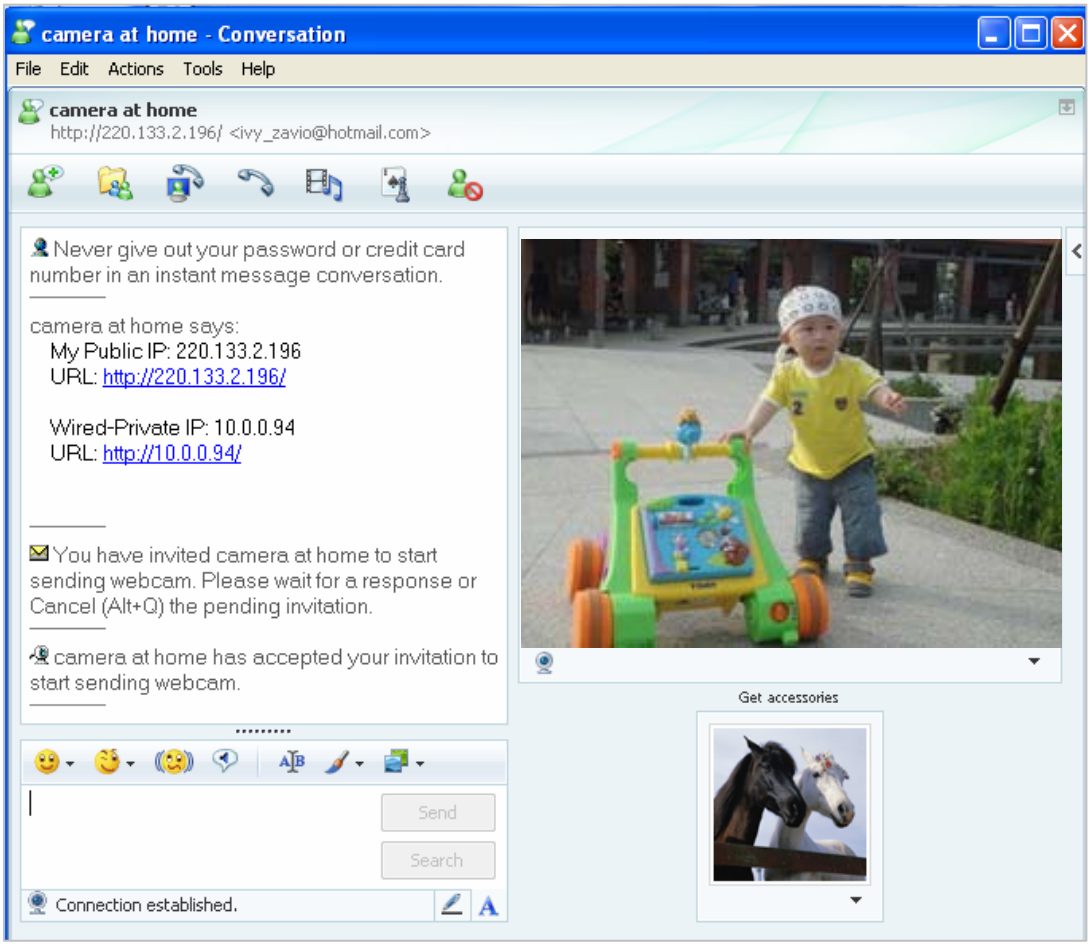
camera at home - Conversation
File Edit Actions Tools Help
camera at home
http://220.133.2.196/ <ivy_zavio@hotmail.com>
Never give out your password or credit card number in an instant message conversation.
camera at home says:
My Public IP: 220.133.2.196
URL: http://220.133.2.196/
Wired-Private IP: 10.0.0.94
URL: http://10.0.0.94/
You have invited camera at home to start sending webcam. Please wait for a response or Cancel (Alt+Q) the pending invitation.
camera at home has accepted your invitation to start sending webcam.
Send
Search
Connection established.
Get accessories

9. Click **Action** button and choose **Start control panel** to use control panel.

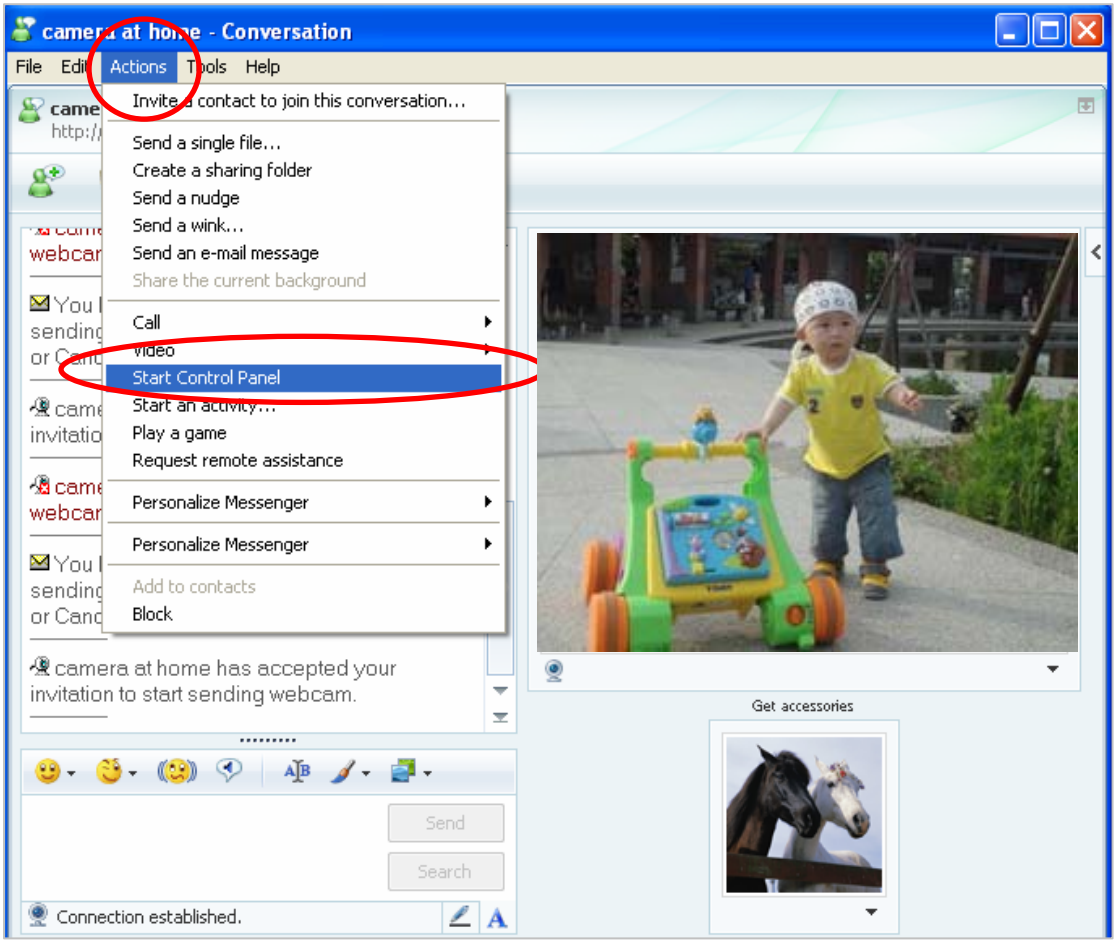

10. The dialog box will show up with "This application is not part if Window Live Message……"

Tick the box of "Don't show me this again" and **click OK**

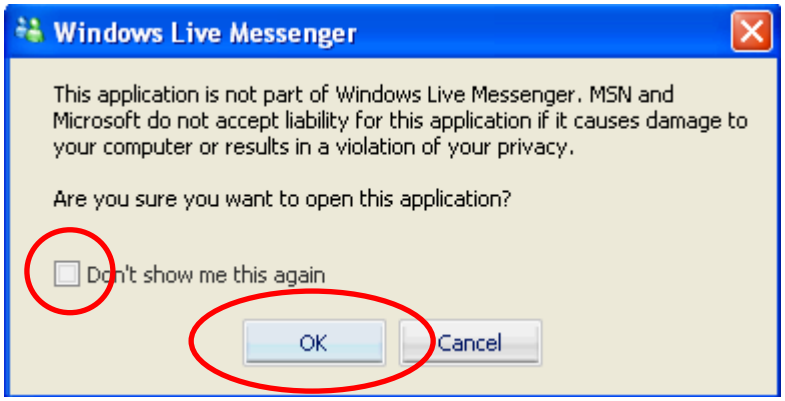
Windows Live Messenger
This application is not part of Windows Live Messenger. MSN and Microsoft do not accept liability for this application if it causes damage to your computer or results in a violation of your privacy.
Are you sure you want to open this application?
Don't show me this again
OK
Cancel

11. The IP Camera will accept your invitation to start **Control Panel.**

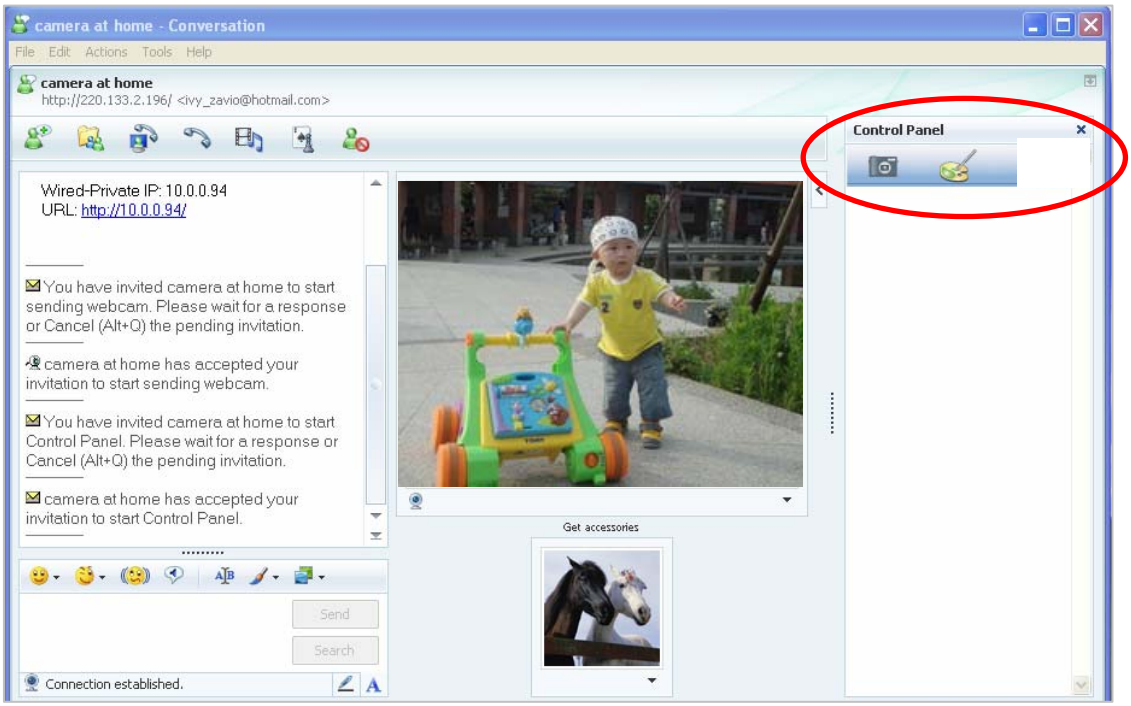
camera at home - Conversation
File Edit Actions Tools Help
camera at home
http://220.133.2.196/ <ivy_zavio@hotmail.com>
Control Panel
Wired-Private IP: 10.0.0.94
URL: http://10.0.0.94/
You have invited camera at home to start sending webcam. Please wait for a response or Cancel (Alt+Q) the pending invitation.
camera at home has accepted your invitation to start sending webcam.
You have invited camera at home to start Control Panel. Please wait for a response or Cancel (Alt+Q) the pending invitation.
camera at home has accepted your invitation to start Control Panel.
Get accessories
Send
Search
Connection established.

12. You can click **Camera icon** **to snapshot** then the picture will send to you immediately.

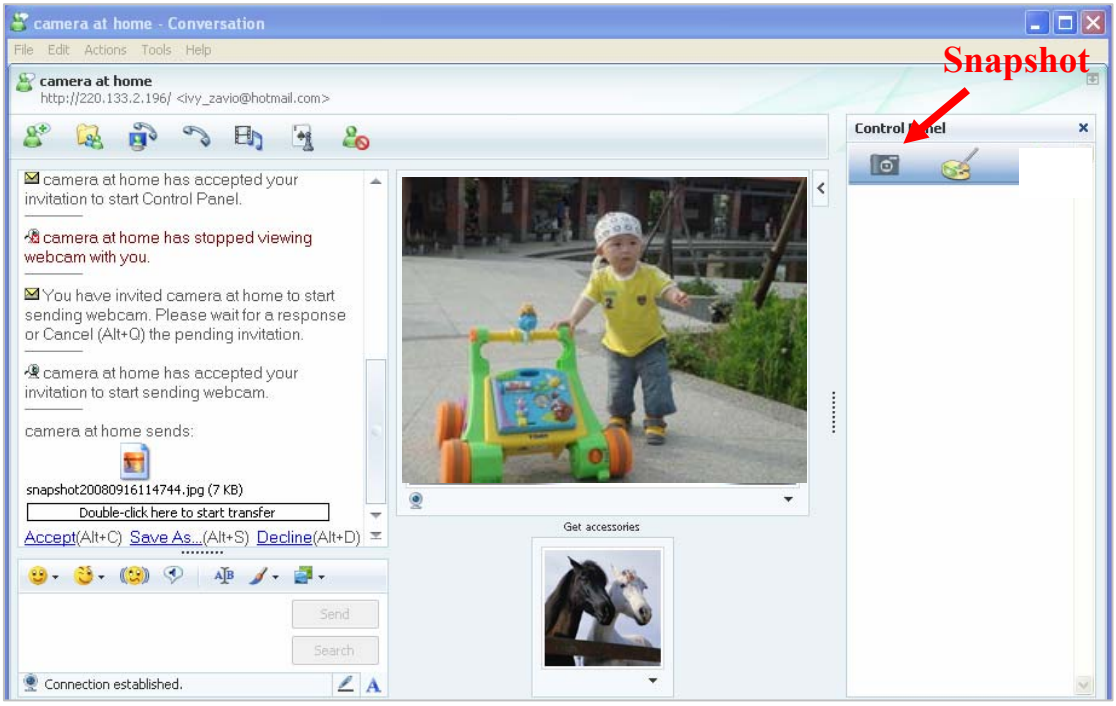
camera at home - Conversation
File Edit Actions Tools Help
Snapshot
camera at home
http://220.133.2.196/ <ivy_zavio@hotmail.com>
camera at home has accepted your invitation to start Control Panel.
camera at home has stopped viewing webcam with you.
You have invited camera at home to start sending webcam. Please wait for a response or Cancel (Alt+Q) the pending invitation.
camera at home has accepted your invitation to start sending webcam.
camera at home sends:
snapshot20080916114744.jpg (7 KB)
Double-click here to start transfer
Accept(Alt+C) Save As...(Alt+S) Decline(Alt+D)
Get accessories
Send
Search
Connection established.

13. You can click **paint palette icon** showing up with tool bar to set up image. Then, you can use the tool bar to optimize video **Brightness** **, Contrast** **, Saturation** **and Hue** **.** After the adjustment of all setting, you can still click  to make the setting back to the original setting.

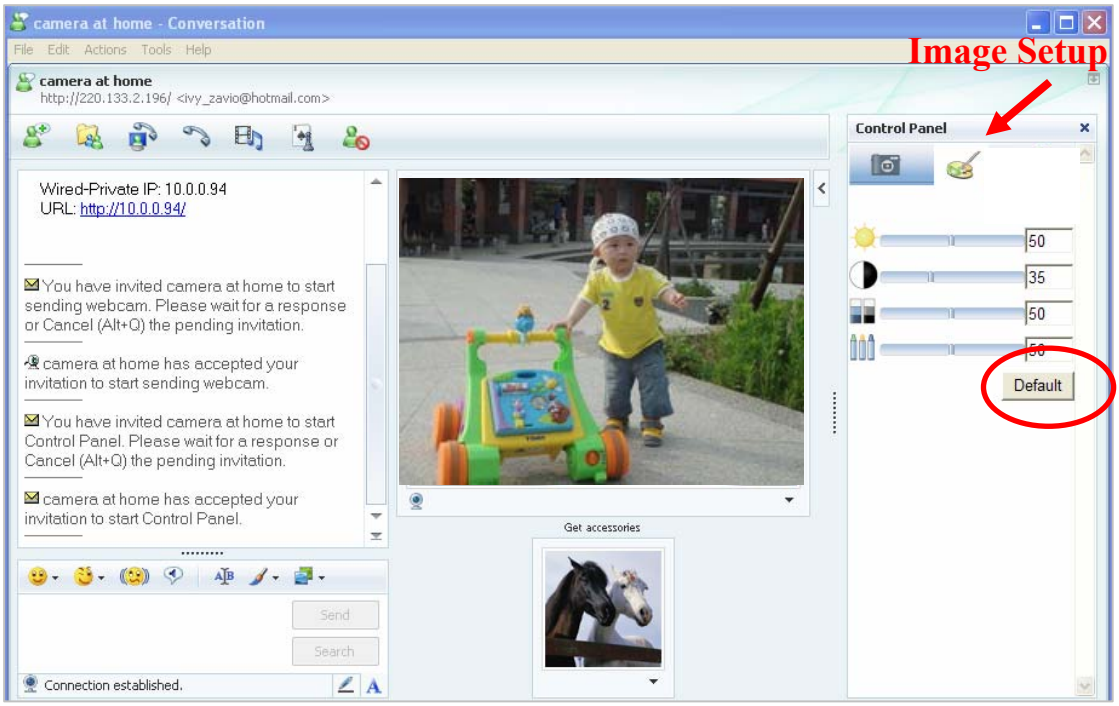
camera at home - Conversation
File Edit Actions Tools Help
camera at home
http://220.133.2.196/ <ivy_zavio@hotmail.com>
Image Setup
Control Panel
Wired-Private IP: 10.0.0.94
URL: http://10.0.0.94/
You have invited camera at home to start sending webcam. Please wait for a response or Cancel (Alt+Q) the pending invitation.
camera at home has accepted your invitation to start sending webcam.
You have invited camera at home to start Control Panel. Please wait for a response or Cancel (Alt+Q) the pending invitation.
camera at home has accepted your invitation to start Control Panel.
50
35
50
Default
Get accessories
Send
Search
Connection established.

Chapter 6 CONFIGURATION OF MAIN MENU

In the far left side of main configuration are Setting, Client Setting, Image Setup. Please see the content behind for more details. In the right hand side of the below picture, you can see the Live View screen of web user interface. There are some functions, such as Snapshot, Zoom and Audio and Video Play.

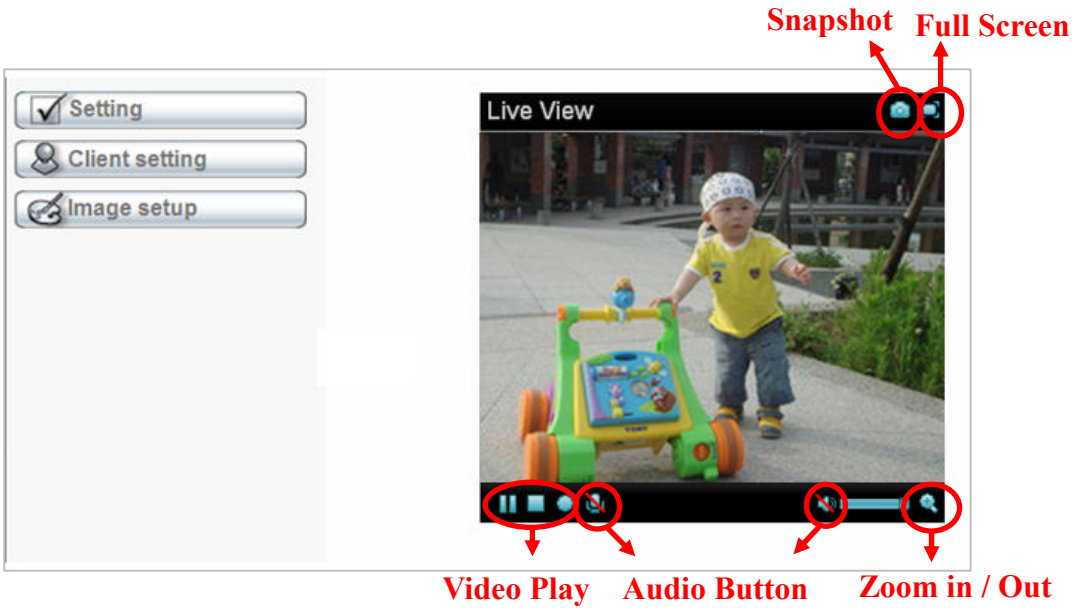

6.1. LIVE VIEW

6.1.1. Snapshot

You can capture a still image shot by the camera and save it in your computer.

Symbols	Meaning
	A snapshot window will appear
Save	Save the picture in your computer
Close	Return to the view page
	Full Screen

6.1.2. Zoom in / out the image via the monitor window

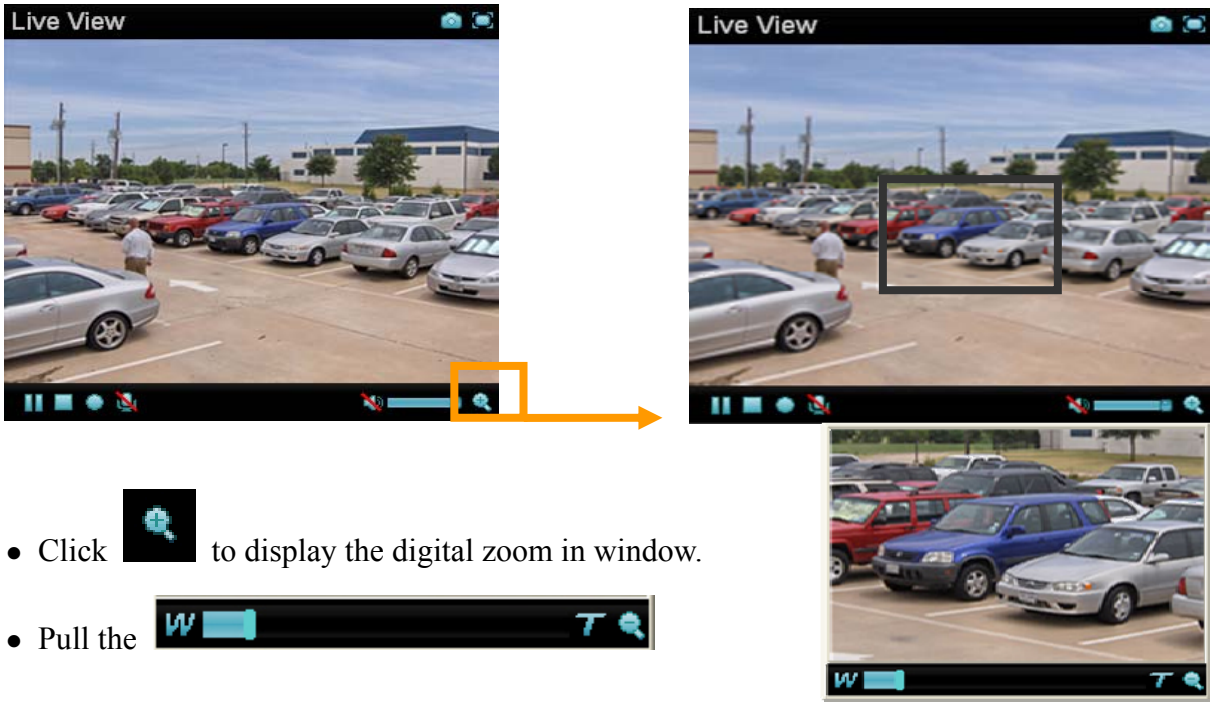

- Click to display the digital zoom in window.
- Pull the to adjust the digital zoom range, and it will be showed on the above window.
- You can use the left click of your mouse to move the to any where on the window.

6.1.3. Video play buttons

Symbols	Meaning
	Pause the current video
	Play the video
	Stop the current video
	Record the current video

Note:

Concerning the recording storage requirement of your hard disk, please refer to the APPENDIX / B. Storage Requirement Table.

6.1.4. Audio buttons

Symbols	Meaning	Note
	Speakers turned on	**mean the speakers of your computer are turned on to transmit the sounds from the connected IP camera(s)**
	Speakers turned off	
	Microphone turned on	**mean you can broadcast to the connected IP camera(s) via the Ethernet using your microphone**
	Microphone turned off	
	Volume control bar	

6.2. SETTING

This function is only for the Administrator. Click this button to get into the **Basic** and **Advancd Setting** menu. The former includes for sub-folders, such as **System, Camera, Network, and Security.** The latter includes **FTP Client, SMTP, Http Event, Schedule, Motion Detection, and System Log.**

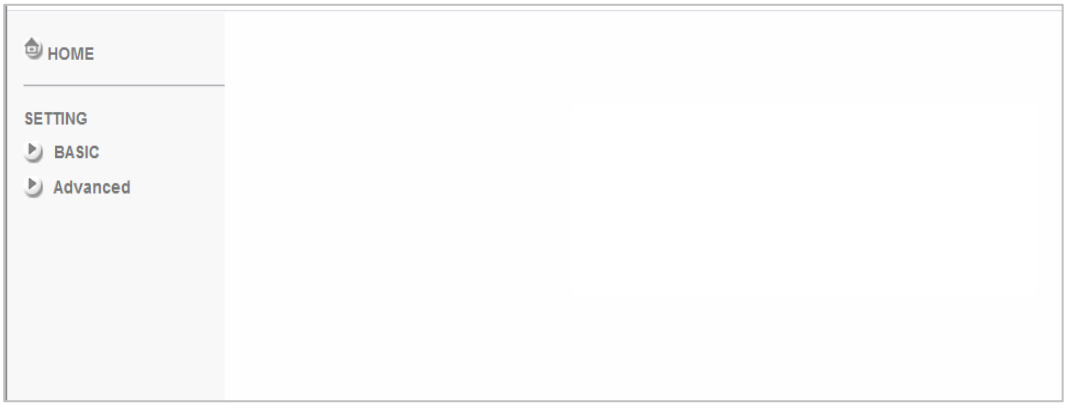

6.3. CLIENT SETTING

This function is only for the client.

Click this button to control **Mode, View Size, Protocol,** and **Video Buffer.**

6.3.1 Mode

Click the pull-down box to choose between MPEG-4 MJPEG, and JPEG video compression mode. MJPEG streaming is unavailable if RTSP mode is "On."
(Please check Setting → Basic → Camera → Genera)

6.3.2 View Size

Select the desired display image resolution to 640X480 or 320X240.

6.3.3 Protocol

Select the transferring protocol from TCP, UDP, HTTP and Multicast.

6.3.4 Video Buffer

Turn the Video Buffer function On/Off. The Video Buffer function makes the streaming more smoothly in unsteady network environment, but might cause a little delay in live viewing.

6.4. IMAGE SETUP

You can use the tool bar to optimize video **Brightness, Contrast, Saturation** and **Hue.**

6.4.1 Brightness

The higher value the brightness is, the brighter the image is.

6.4.2 Contrast

The contrast is a measure of a display system, defined as the ratio of white to black that the system is capable of producing. The higher value the contrast is, the more delicate of color you can have.

6.4.3 Saturation

The saturation of a color is determined by a combination of light intensity and how much it is distributed across the spectrum of different wavelengths. The higher value the saturation is, the more colorful the image will be.

6.4.4 Hue

Hue is one of the three main attributes of perceived color, affected by different wavelength of color. With higher value of hue, color will be much more vivid.

6.4.5 Default

After the adjustment of all setting, you can still click Default to make the setting back to the original setting.

Chapter 7 SETTING-BASIC

Click the folder of **Basic** to display the sub folders including **System, Camera, Network, and Security.**

7.1. SYSTEM

Click the folder of **System** to display the sub-folders including **Information, Date / Time, and Initialize.**

7.1.1. Information

The Information page provides the product factory information which includes **Product Name, Firmware Version and Web Version.**

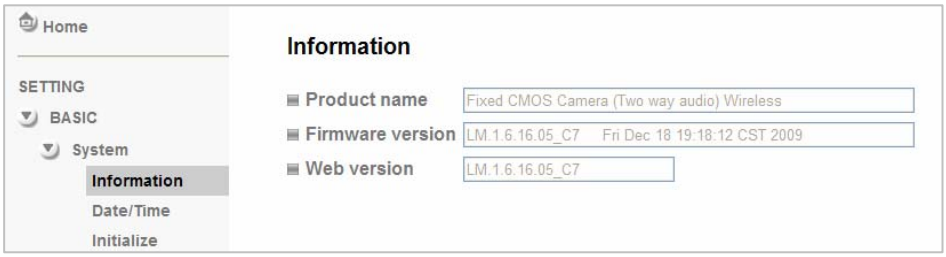

7.1.2. Date/Time

The Date/ Time page displays all options of time setting.

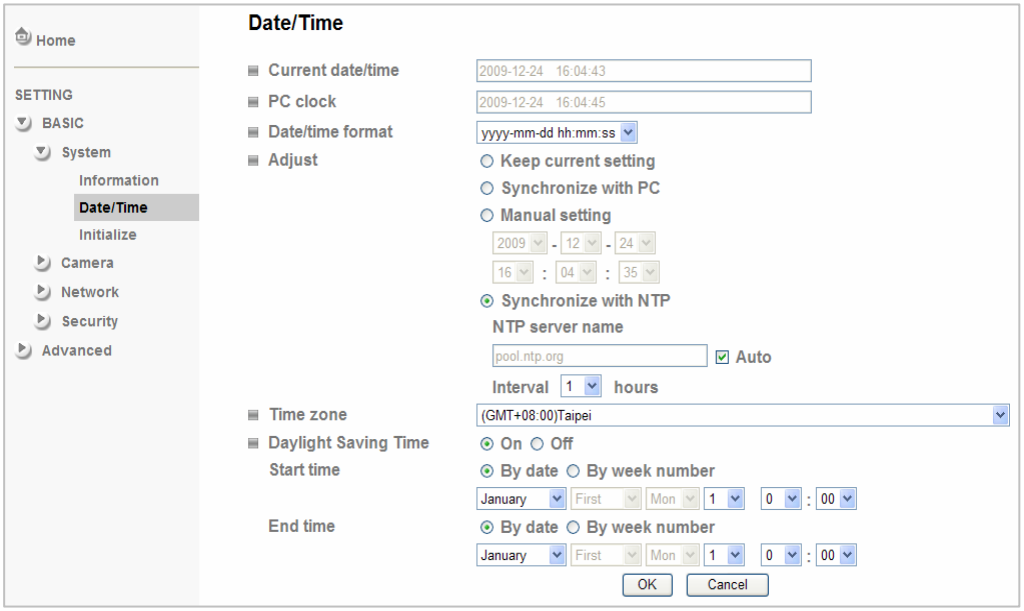

- **Current date / time**: This displays the current date and time of this IP Camera.

- **PC clock**: This displays the date and time of the monitoring PC clock.

- **Date / Time format**: You can click the pull down box to select different time display formats.

- **Adjust**: You can select one of those four adjusting modes for your IP Camera.
  - Keep current setting: Select this mode to keep the current date and time of this IP Camera.
  - Synchronize: Select this mode to keep the date and time of this IP Camera is the same as the monitoring PC.
  - Manual setting: Select this mode to adjust manually the date and time of this IP Camera.
  - Synchronize with NTP: Specify the NTP server name and the Refresh Interval to synchronize the date and time of this IP Camera with those of the time server, known as the NTP server.

- **Time Zone**: You can select the Time Zone of the format from Greenwich Mean Time. The time will display the same as the current date / time option.

- **Daylight Saving Time**: There are two modes to choose for setting up daylight saving time.
  - **By Date**: Set the start and end time by select month, day, hour, and minute.
  - **By Week Number**: Set the start and end time by select month, week, hour, and minute.

Note:

The NTP server (Network Time Protocol) is the time server which is an Internet standard protocol built on the top of TCP / IP. This assures accurate synchronization to the millisecond of computer clock times in a network of computers.

7.1.3. Initialize

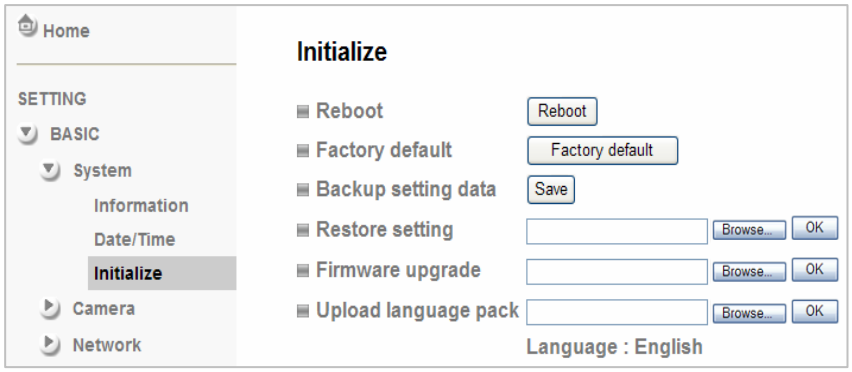

➢ **Reboot**: Click this bottom to reboot. A confirmation dialogue will appear and then click "OK" to process. It takes two minutes to reboot this IP Camera.

➢ **Factory Default**: Click this bottom to reset this IP Camera to the factory default setting. A confirmation dialogue will appear and then click "OK" to process. Don't turn off this IP Camera until the device reboots.

➢ **Backup Setting**: You can save the setting data of this IP Camera into a file. Click "Save" and follow the instructions on the browser to save the setting data file to your specified location.

➢ **Restore Setting**: Download the saved setting data of this IP Camera. Click "Browse" and select saved file. Click "OK" and this IP Camera is adjusted according to the loaded data and then restarted.

➢ **Firmware Update**: Upgrade the device software. Click "Browse" and select the file for upgrading. A confirmation dialogue will appear. Click "OK" to start upgrading. This IP Camera will reboot upon completion.

Note:
Use only upgrade files that are special for this IP Camera. Otherwise problems may occur. Don't turn off the IP Camera power or disconnect the network until the upgrading is completed.

Note:
After upgrading new firmware, please execute "Factory Default" first to make it work.

➢ **Upload Language Pack**: Upgrade the device language pack. Click "Browse" and select the file for upgrading. A confirmation dialogue will appear. Click "OK" to start upgrading. The upgrade is applied immediately. The default language is "English."

7.2. CAMERA

Click the folder of **Camera** to display the sub folders including **General, MPEG4 and MJPEG.**

7.2.1. General

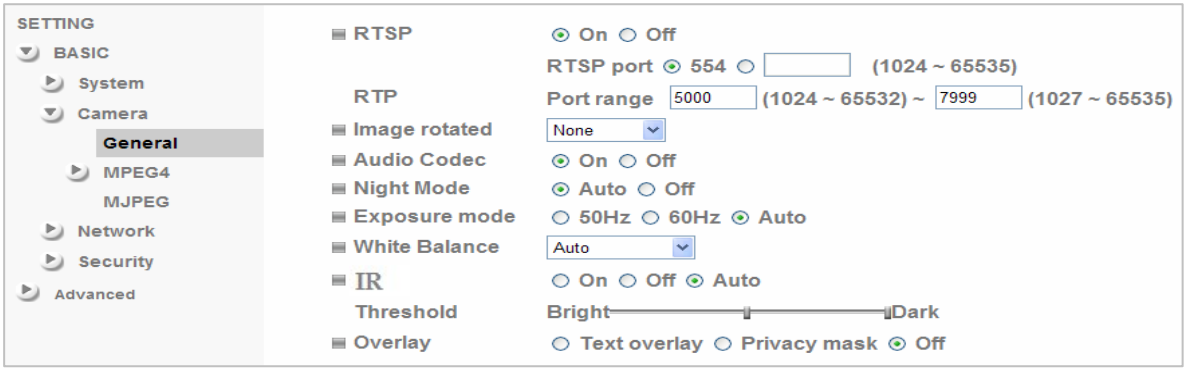

➢ **RTSP** : Switch RTSP "On" or "Off." The default value is 554.

Note:

RTSP (Real Time Streaming Protocol) is a protocol for use in streaming media system which allows clients to remotely control a streaming video server. RTSP is supports by most of the media clients such as Real Player, QuickTime and VLC...etc.

➢ **Image Rotate**: You can mirror or flip the display screen.

➢ **Audio Codec**: If this option is selected On, the microphone will start sound reception.

➢ **Night Mode**: You can choose Auto / Off. **If you choose Auto option**, the camera will adjust automatically to perform well when the environment is dark.

➢ **Lighting**: You can choose the environment among 50 Hz, 60 Hz , and Auto.

➢ **White Balance**: You can choose the white balance to Auto, Florescent, Incandescent and Black & White.

➢ **IR**: You can turn IR light On / Off and Auto. If you select Auto mode, you

can adjust threshold for IR Auto-On and Auto-Off respectively. In the right hand side of threshold, if the tool bar is closer to the right, the IR will auto-on easily in the dark environment. Conversely, in the left hand side of threshold, if the tool bar is more approach to the left, the IR will auto-off easily in the bright environment.

Note:

LED will light up after 10 seconds in dark environment.

➢ **Overlay**:

- ●Text Overlay: You can see some information on the display screen which includes Date / Time and user-defined text. Also, you can change the background color.
- ●Privacy Mask: You can cover a specific area of the video image.

7.2.2. MPEG-4

A. Computer View

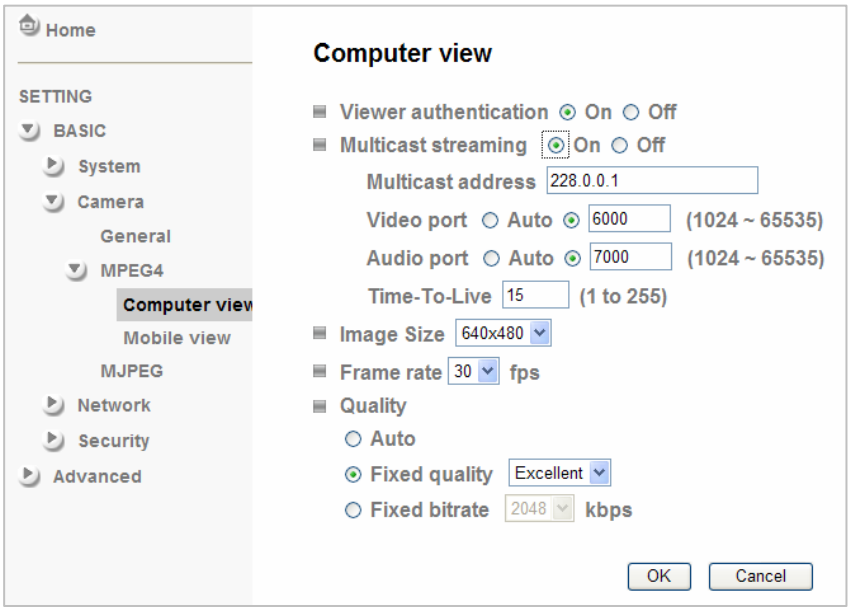

If **RTSP** is **ON**, the option of Viewer Authentication & Multicast Streaming will appear. (**Please check "Setting → Basic → Camera → General ")**

➢ **Viewer Authentication:** If the viewer authentication is On, the users will be requested to

key-in username and password when viewing through RTSP.

➢ **Multicast Streaming (If it's on):**

- ●Multicast Address: Specify the multicast server address.
- ●Video / Audio Port: Specify the transmission port number of the video data. Specify an even number from 1024 to 65534.
- ●Time to Live: Set the maximum TTL that multicast can pass through. Specify the value from 1 to 255.

➢ **Image Size**: Specify the image size when the network camera transmits. You can choose among 640 x 480, 320 x 240, and 160 x 120.

➢ **Frame Rate**: Set the frame rate of the MPEG4 image. You can choose values from 1, 2, 3, 4, 5, 7, 10, 15, 20, 25, and 30 fps. The unit "fps" stands for "frames per second".

➢ **Quality:**

- ●Auto: The quality and bitratee will be adjusted automatically according to the frame rate.
- ●Fixed Quality: You can select the value of quality among Medium, Standard, Good, Delicate and Excellent.
- ●Fixed Bitrate: Set the bitrate of MPEG4 image transmission for a line. You can select the value from 64, 128, 256, 384, 512, 768, 1024, 1280, 1536, and 2048 kbps.

Note:

Concerning how to select the suitable image quality for Fixed Quality or Fixed Bitrate, please refer to the APPENDIX / A. Frame-rate & Bitrate Table.

B. Mobile View

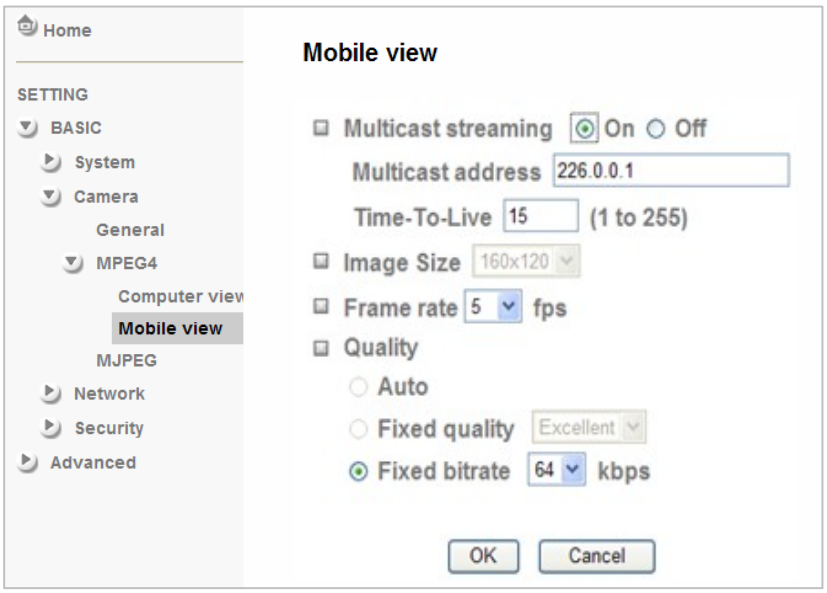

If **RTSP** is **ON**, the option of Viewer Authentication & Multicast Streaming will appear. (Please check "Setting → Basic → Camera → General ")

Note: If RTSP is off, Mobile View will be disabled.

- **Viewer Authentication:** If the viewer authentication is On, the users will be requested to key-in username and password when viewing through RTSP.

- **Multicast Streaming (If it's on):**
  - ●Multicast Address: Specify the multicast server address.
  - ●Video / Audio Port: Specify the transmission port number of the video data. Specify an even number from 1024 to 65534.
  - ●Time to Live: Set the maximum TTL that multicast can pass through. Specify the value from 1 to 255.

- **Image Size**: The image size of Mobile View is fixed at 320x240 or 160 x 120.

- **Frame Rate**: Set the frame rate of the MPEG4 image. You can choose values from 5 and 10fps. The unit "fps" stands for "frames sent per second".

- **Quality:**
  - ●Auto: The quality and bitratee will be adjusted automatically according to the frame rate.
  - ●Fixed Quality: You can select the value of quality among Medium, Standard, Good, Delicate and Excellent.
  - ●Fixed Bitrate: Set the bitrate of MPEG4 image transmission for a line. You can select the value from 16, 32, 48, 64, 128, and 256 kbps.

Note:

Concerning how to select the suitable image quality for Fixed Quality or Fixed Bitrate, please refer to the APPENDIX / A. Frame-rate & Bitrate Table.

7.2.3. MJPEG

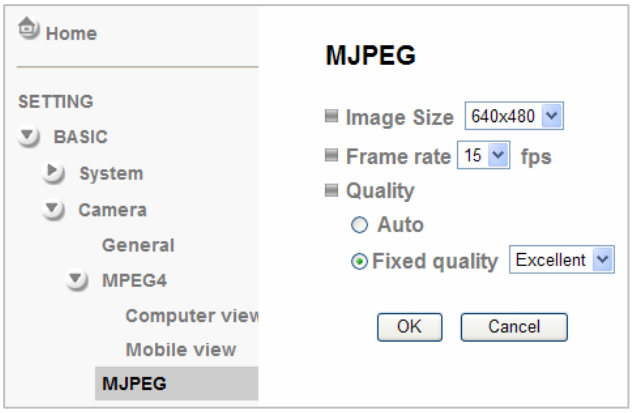

If **RTSP** is **OFF**, the option of Image Size & Frame Rate & Quality will appear. (Please check "Setting → Basic → Camera → General ")

➢ **Image Size**: Specify the image size when the network camera transmits. You can choose among 640 x 480, 320 x 240, and 160 x 120.

➢ **Frame Rate**: Set the frame rate of the MJPEG image. You can choose values from 1, 2, 3, 4, 5, 7, 10, and 15 fps. The unit "fps" stands for "frames per second".

➢ **Quality:**

- Auto: The quality will be automatically decided.
- Fixed Quality: You can select the value of quality among Medium, Standard, Good, Delicate and Excellent.

Note:

Concerning how to select the suitable image quality for Fixed Quality or Fixed Bitrate, please refer to the APPENDIX / A. Frame-rate & Bitrate Table.

7.3. NETWORK

Click the folder of **Network** to display the sub folders including **Information, PPPoE, DDNS, UPnP, Bonjour, IP Notification, Wireless(for wireless models) and Messenger.**

7.3.1. INFORMATION

Display the MAC address of the device.

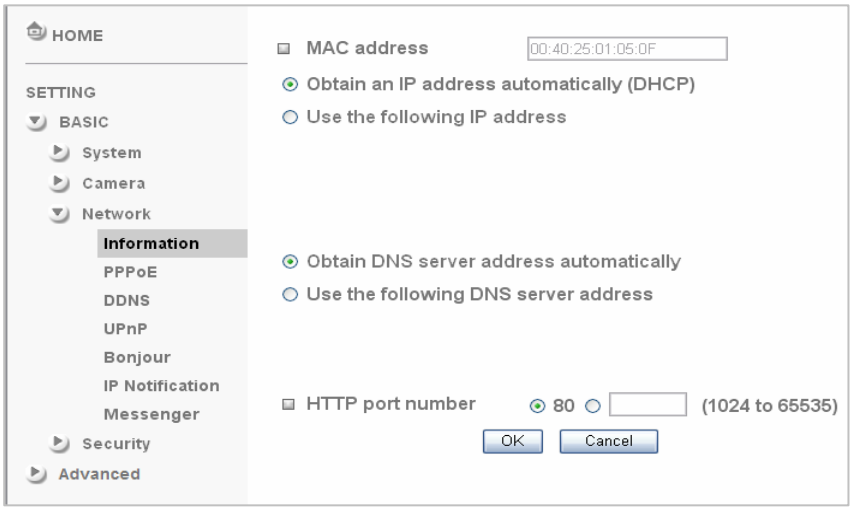

➢ **Obtain an IP address automatically (DHCP)**: If a DHCP server is installed on the network, to select this while the IP address is assigned by the DHCP server.

➢ **Obtain DNS server address automatically**: Select this to obtain the address of DNS server automatically.

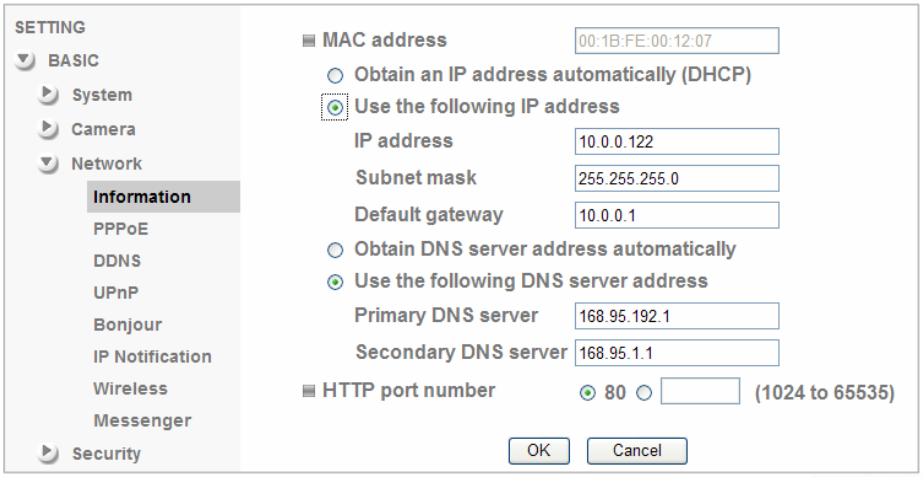

➢ **Use the following IP address**: Select this when the fixed IP address is set.

- IP address: Enter the IP address of the device.
- Subnet mask: Enter the subnet mask.
- Default gateway: Enter the default gateway.

➢ **Use the following DNS server address**: Select this when you set the fixed address as the IP address of DNS server.

- Primary DNS server: Enter the IP address of the primary DNS server.
- Secondary DNS server: Enter the IP address of the secondary DNS server, if necessary.

➢ **HTTP port number**: Select **80** in general situations. If you want to use a port number other than **80**, select the text box and enter a port number between 1024 and 65535.

- When you have set the HTTP port number to a number other than 80 on the Network setting page or in the Setup Program, access the device by typing the IP address of the device on the web browser as follows:
  Example: when HTTP port number is set to 2000
  http://192.168.1.100:2000/

Note:

The IP Camera needs to be rebooted after it finishes changing the network setting completely.

Note:

If you connect the IP Camera with your computer directly, the default network domain of camera is 192.168.1.xx

7.3.2. PPPoE(Point-to-Point Protocol over Ethernet)

If your ISP provides Dynamic IP with authentication by username and password, type all PPPoE information in this part. When you use the PPPoE function, you need to turn on the DDNS or IP Notification function at same time.

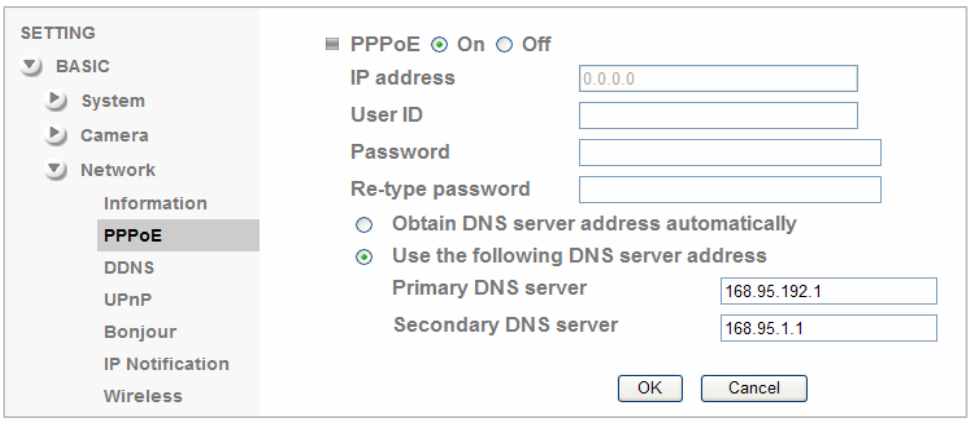

➢ **IP Address**: The IP address obtained at the PPPoE connecting with network.

➢ **User ID**: Enter the user ID for authentication necessary for PPPoE connections. Type it up to 64 characters.

➢ **Password**: Enter the password for authentication necessary for PPPoE connections. Type it up to 32 characters.

➢ **Re-type Password**: Re-type the password to confirm.

➢ **Obtain DNS server address automatically**: Select this to obtain the address of DNS server automatically.

➢ **Use the following DNS server address**: Select this when you set the fixed address as the IP address of DNS server.

- Primary DNS server: Enter the IP address of the primary DNS server.
- Secondary DNS server: Enter the IP address of the secondary DNS server.

Note :

1. PPPoE (Point-to-Point Protocol over Ethernet): PPPoE is a network protocol for encapsulating Point-to-Point Protocol frames insider Ethernet frames. PPPoE connection is used mainly with ADSL service where individual users connect to the ADSL transceiver (modem) over Ethernet work. It also widely used in XDSL. (digital affiliate line such as ADSL, VDSL or SDSL)

2. The IP Camera needs to be rebooted after it finishes changing the network completely.

3. The IP Camera with Intelligent IP Installer can't be founded after turning on the PPPoE and reboot.

7.3.3. DDNS(Dynamic DNS)

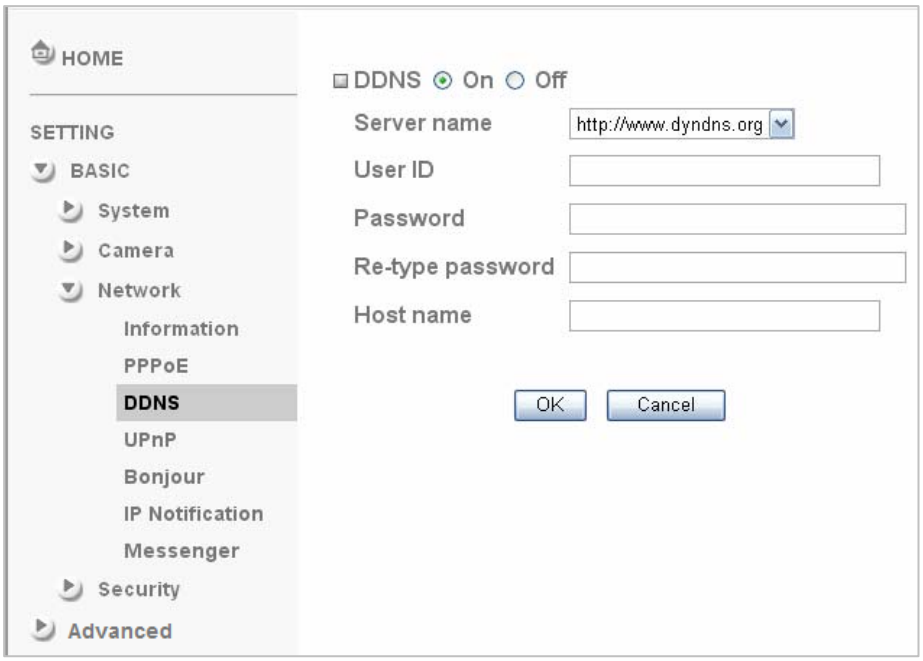

DDNS is a system which allows the domain name data held in a name server to be updated in real time. The most common use for DDNS is allowing an internet domain name to be assigned to a computer with a varying / dynamic IP Address. This makes it possible for other sites on the internet to establish connection to the machine without needing to track the IP Address themselves.

- **Server name**: Choose the DDNS Server from the list.
- **User ID**: Enter the user ID for authentication necessary for DDNS connections. Type it up to 64 characters.
- **Password**: Enter the password for authentication necessary for DDNS connections. Type it up to 32 characters.
- **Re-type password**: Re-type the password to confirm.
- **Host name**: Enter the host name that is registered to the DDNS server.

Note :

How to apply DDNS username and Host name??

You can apply DDNS username and Host name by the following steps:

1. Login http://www.dyndns.org, click the Create Account

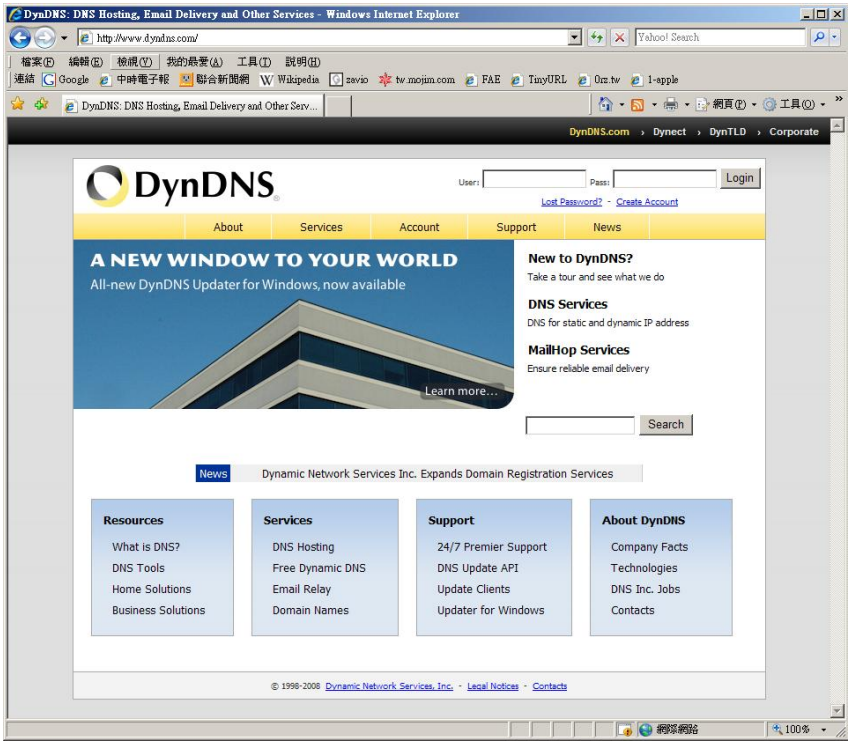

2. Input all information and follow step by step with DynDNS.

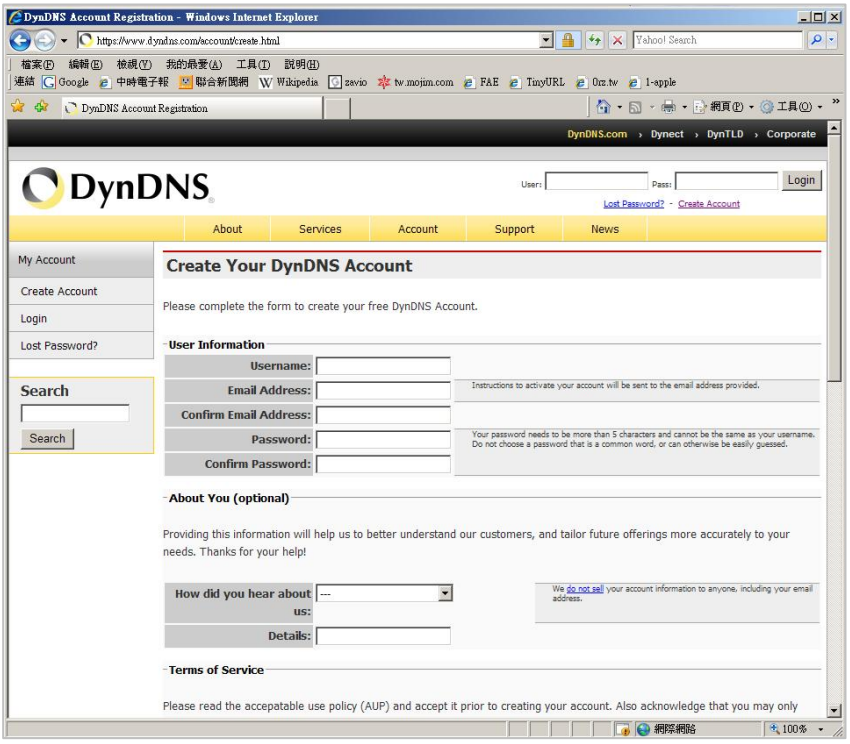
DynDNS Account Registration - Windows Internet Explorer
DynDNS
About
Services
Account
Support
News
My Account
Create Account
Login
Lost Password?
Search
Create Your DynDNS Account
Please complete the form to create your free DynDNS Account.
User Information
Username:
Email Address:
Confirm Email Address:
Password:
Confirm Password:
About You (optional)
Providing this information will help us to better understand our customers, and tailor future offerings more accurately to your needs. Thanks for your help!
How did you hear about us:
Details:
Terms of Service
Please read the accepatable use policy (AUP) and accept it prior to creating your account. Also acknowledge that you may only

3. Login with new account and click Account → My Hosts → Add Host Services

4. Type domain in the Hostname field and select sub-domain

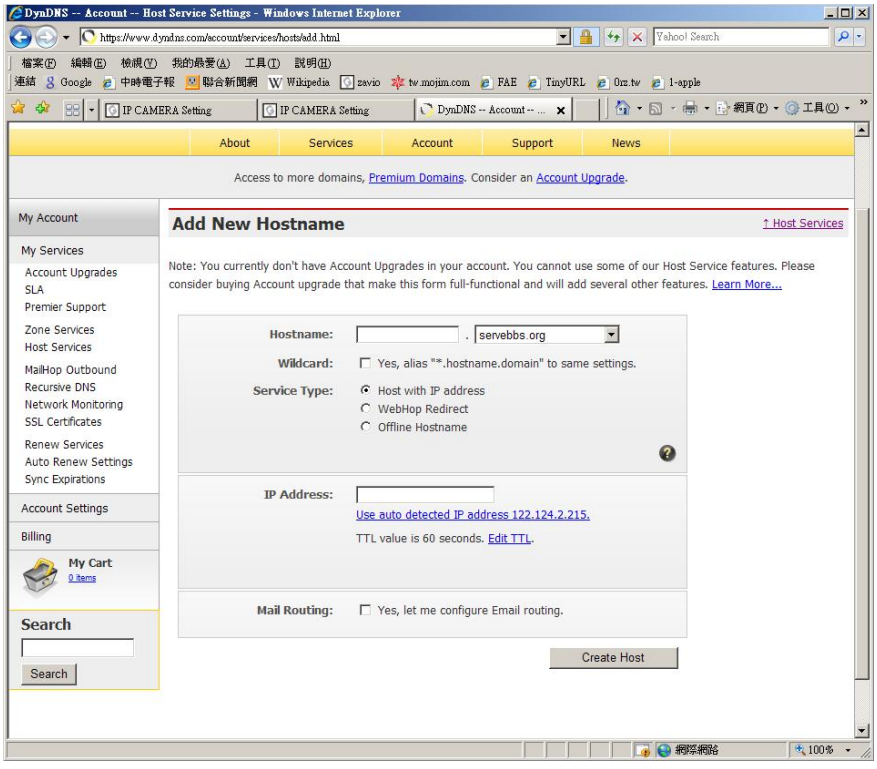

5. After type information, check your DDNS service.

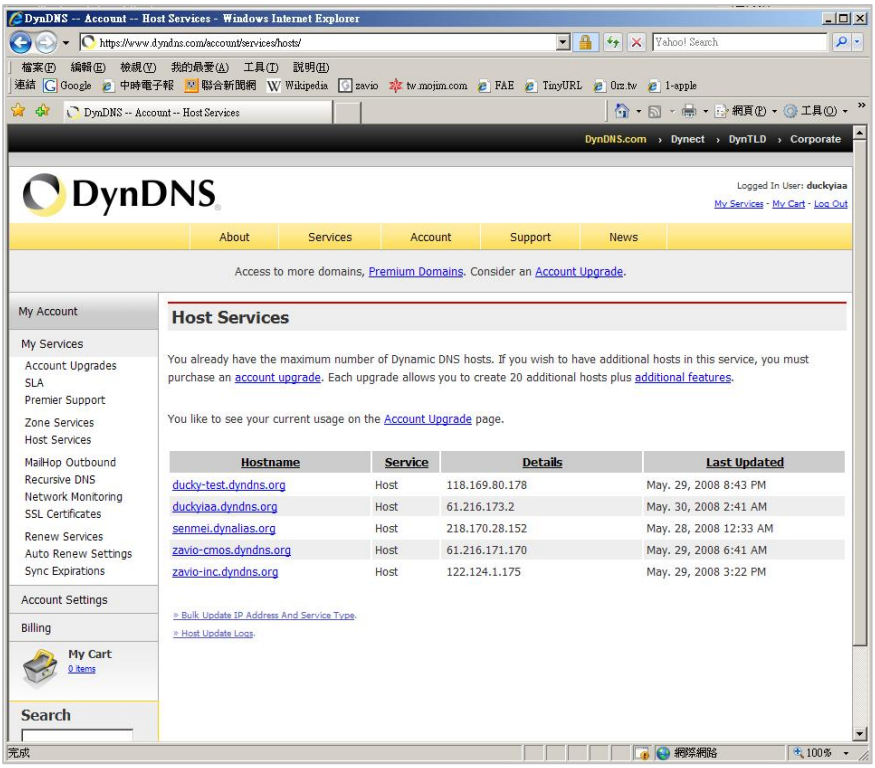

6. Type your DDNS User ID, Password and Host name in Setting → Network → DDNS. After completing setting, reboot IP Camera.

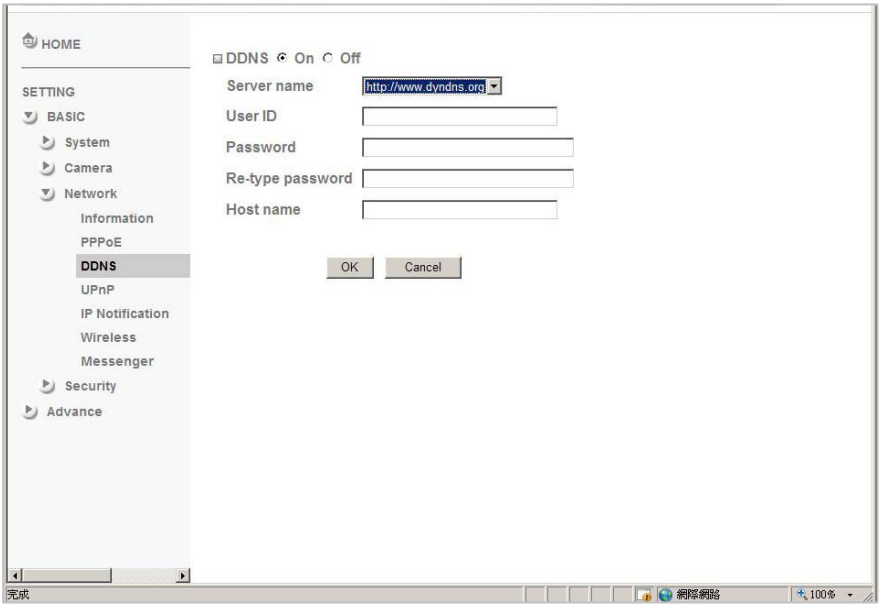

7.3.4. UPnP(Universal Plug and Play)

You can select UPnP function “On” or “Off”.

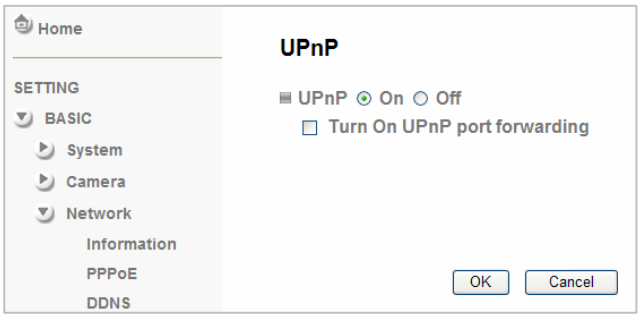

If a ROUTER is used to access to internet and it supports UPnP IGD function, please turn on the UPnP Port Forwarding function.

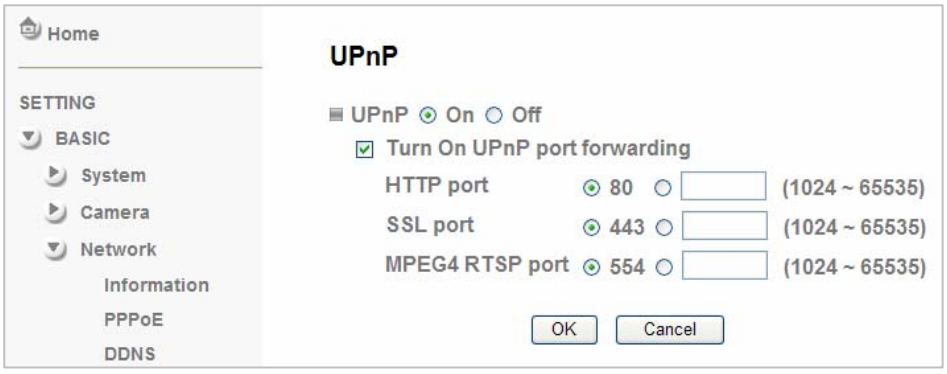

➢ **HTTP port**: The default HTTP port is 80. Or the port number can be entered, ranged from 1024 to 65535.

➢ **SSL port:** The default SSL port is 443. Or the port number can be entered, ranged from 1024 to 65535.

➢ **MPEG4 RTSP port:** The default MPEG-4 RTSP Port is 554. Or the port number can be entered, ranged from 1024 to 65535.

Note :

UPnP (Universal Plug and Play): UPnP is a set of computer network protocol. It allows devices to connect seamlessly and simplify the implementation of networks in the home and corporate environments. The device supports UPnP which is enabled by default. The device will be automatically detected and a new icon will be added to “My Network Place” if it also enables on your computer. It provides Port Forwarding for opening a port in a router or firewall in a private network in order to let a party from the outside world contact a inside user.

7.3.5. Bonjour

Bonjour, also known as zero-configuration networking, enables automatic discovery of computers, devices, and services on IP networks. Bonjour uses industry standard IP protocols to allow devices to automatically discover each other without the need to enter IP addresses or configure DNS servers.

➢ **Device Name**: Enter Device Name you wish.

Note:

How to use Bonjour in your Windows Browser UI? Please check the link below:

http://www.apple.com/support/downloads/bonjourforwindows.html

7.3.6. IP Notification

When network notify type is set to "ON", you can send an e-mail notification of the completion of the network setting.

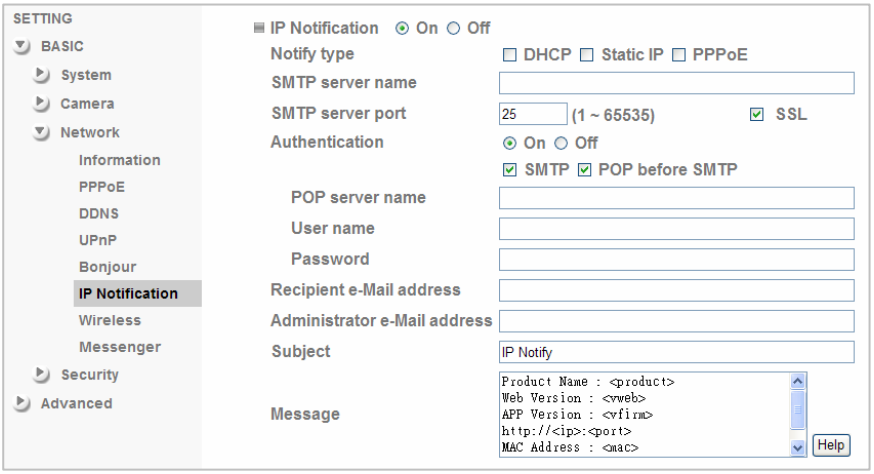

➢ **Notify Type**: You can select the notify type among DHCP, Static IP, and PPPoE.

➢ **SMTP Server Name**: Type the SMTP server name up to 64 characters, or

the IP address of the SMTP server.

➢ **SMTP Server Port**: You can set port number from 1~65535 according to your mail server. The default value is 25.

●Security setting: Tick SSL box if the mail server you use has security restriction.

Note:

If you use g-mail as your mail server, you should set 587 as your port number and tick SSL box.

➢ **Authentication**: Select the authentication required when you send an email.

●Off: Select if no authentication is necessary when an email is sent.

●On: When authentication is necessary an e-mail is sent, there are **SMPT, POP before SMPT or both** three options.

➢ **SMTP:** Select if SMTP authentication is necessary when an e-mail is sent.

➢ **POP before SMTP**: Select if POP before SMTP authentication is necessary when an e-mail is sent.

●**POP server name**: It is necessary when the **POP before SMTP** is selected in **Authentication**. Type the POP (receiving mail) server name up to 64 characters, or type the IP address of the POP server. This setting is necessary when the SMTP server which sends e-mails performs authentication using the POP user account.

●**User name, Password**: Type the user name and Password of the user who has the mail account. This setting is necessary when the SMTP server which sends e-mails performs authentication.

➢ **Recipient e-mail address**: Type the recipient e-Mail address up to 64 characters. You can specify up to three recipient E-mail addresses.

➢ **Administrator e-mail address**: Type the Administrator e-Mail address up to 64 characters. This address is used for reply mail and sending system messages from the SMTP server.

➢ **Subject**: Type the subject/title of the e-Mail up to 64 characters. With respect to mail which is sent according to the IP notification.

➢ **Message**: Type the text of the E-mail up to 384 characters. Default value provides network information including IP, Port, MAC, Model, Firmware Version and Web Version.

7.3.7. Messenger

If Messenger option is selected On, you can set out the setting of MSN account.

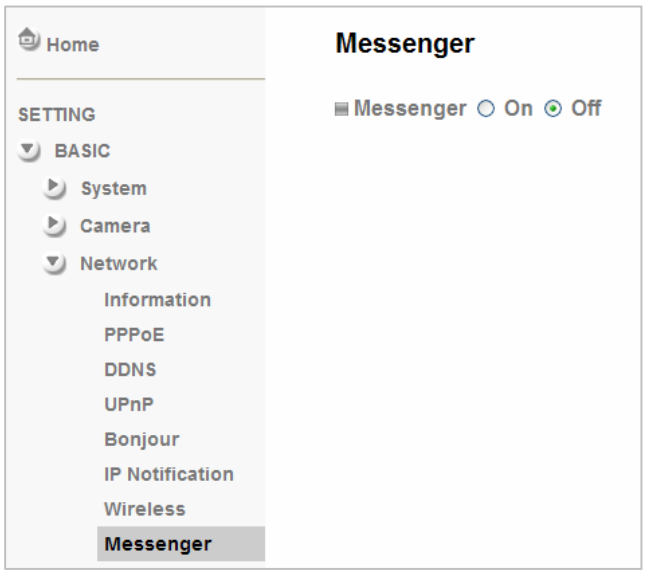

Messenger function provide an easy-connect feature. User can easy to know what camera's private and public IP address is.

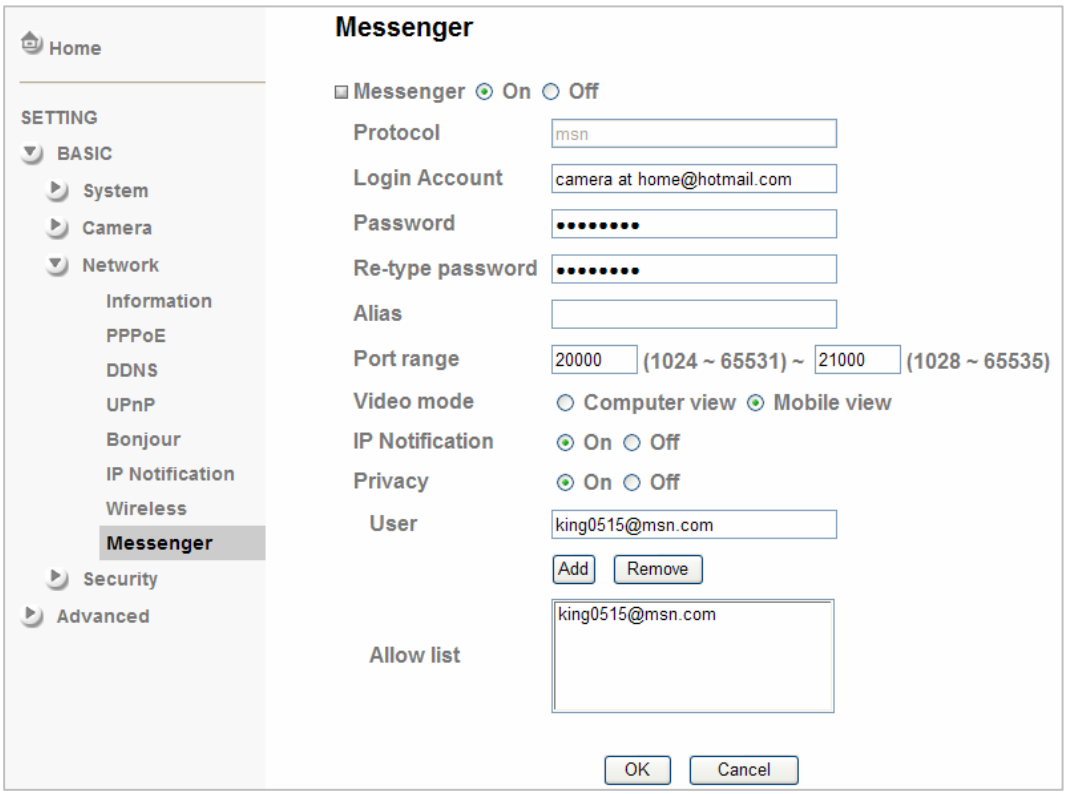

➢ **Protocol**: support MSN only.

➢ **Login Account**: Camera will use this account to login MSN server. This MSN account should be applied form http://www.msn.com.

➢ **Password**: password for this msn account.

➢ **Re-type password**: re-type password to double confirm.

➢ **Alias**: This alias will display on MSN like the following which display in red frame.

➢ **View Mode**: You can select Computer View or Mobile View.

- **Computer View:** This mode is the default value.
- **Mobile View:** If Messenger function doesn't work due to the firewall or the function limit of router, please choose Mobile View.

➢ **Port range**: Camera will select one port from this port range for video transmission.

➢ **IP Notification**: Switch the IP notification On / Off. **If this feature switches On**, camera will send IP notification to the users who are allowed.

➢ **Privacy**: Switch privacy On / Off. **When privacy turns on**, only those users in allowed list can access the camera.

➢ **User**: Input to this blank to edit allow list.

➢ **Allow list**: When privacy turns on, only those users in allow list can access the camera.

7.4. SECURITY

Click the folder of **Security** to display the sub folders including **Account and HTTPS.**

7.4.1. Account

The device fault account and password setting is “admin / admin”. That means everyone who knows IP address can access the device including all configuration. It is necessary to assign a password if the device is intended to be accessed by others.

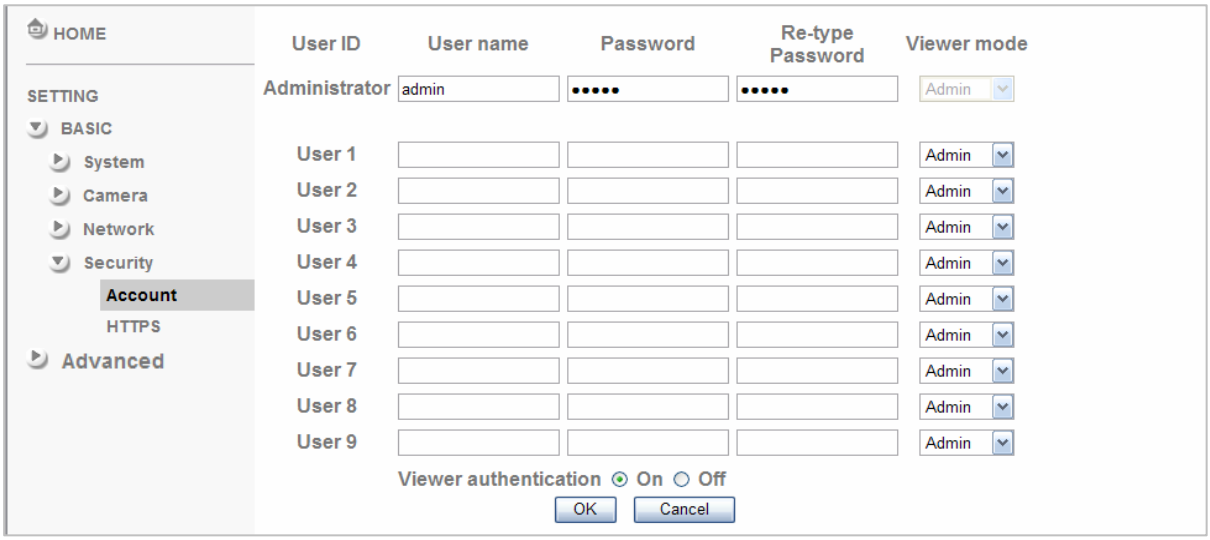

➢ **User name**: Set a user name between 4-16 characters.

➢ **Password**: Set a password between 4-16 characters.

➢ **Re-type Password**: Re-type the password to confirm.

➢ **Viewer Mode**: Set the user mode among Admin, Operator, and Viewer. Different viewer mode has different limits of authority.

- The Admin mode has all authority of configuration.
- The Operator mode can not only view the Live View but also control the PTZ (apply in speed dome).
- The Viewer mode only can view the Live View.

➢ **Viewer Authentication**: Allows any viewer direct access to Live View.

7.4.2. HTTPS

HTTPS is a URI scheme used to indicate a secure HTTP connection. It is syntactically identical to the http:// scheme normally used for accessing resources using HTTP. Using an https: //URL/ with a different default TCP port (443) and an additional encryption / authentication layer between the HTTP and TCP. You can use the IP camera through HTTPS easily by using https:// instead of http://.

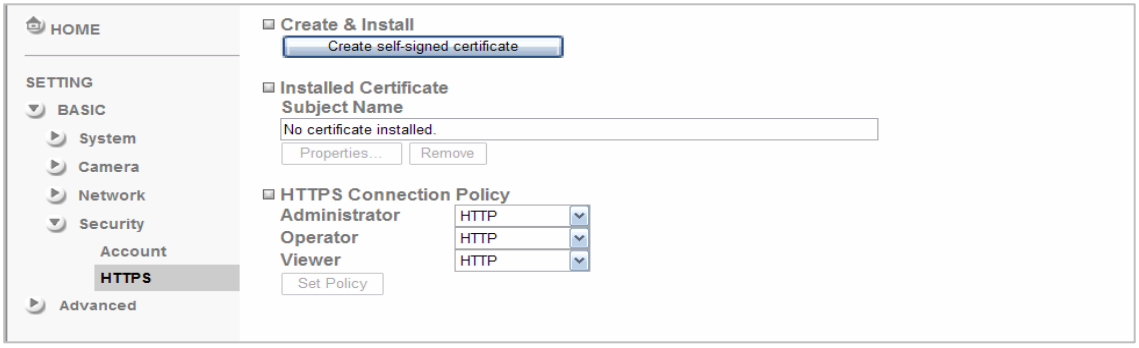

➢ **Create & Install**: Create a self-signed certificate for HTTPS to recognize.

➢ **Installed Certificate**: Display or remove the properties of the installed certificate.

➢ **HTTPS Connection Policy**: Set HTTPS connection policy for different level of users.

➢ To use the HTTPS encryption, please set up "**Create self-signed certificate**" for the first time you use the HTTPS function, and then set up the connection policy for different users.

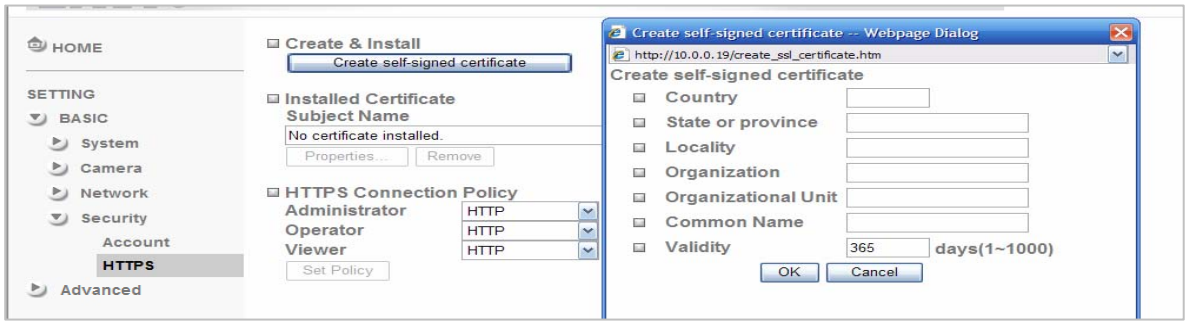

Note:

When enable HTTPS with RTSP on mode, the IP Camera only protect the setting such as username and password and do not protect video and audio.
When enable HTTPS with RTSP off mode, the IP Camera will protect all setting including video and audio.

Chapter 8 SETTING-ADVANCE

Click the folder of **Advance** to display the sub folders including **FTP client, SMTP, Schedule, Motion detection and System Log.**

8.1. FTP CLIENT

Use this menu to set up for capturing and sending images to an FTP server. By using FTP client function, you can send the **image file** which has been shot and recorded linked with the built-in motion detection function to FTP server. FTP client setting menu is composed of two tabs, **General**, **Alarm sending** and **Periodical sending**.

8.1.1. General

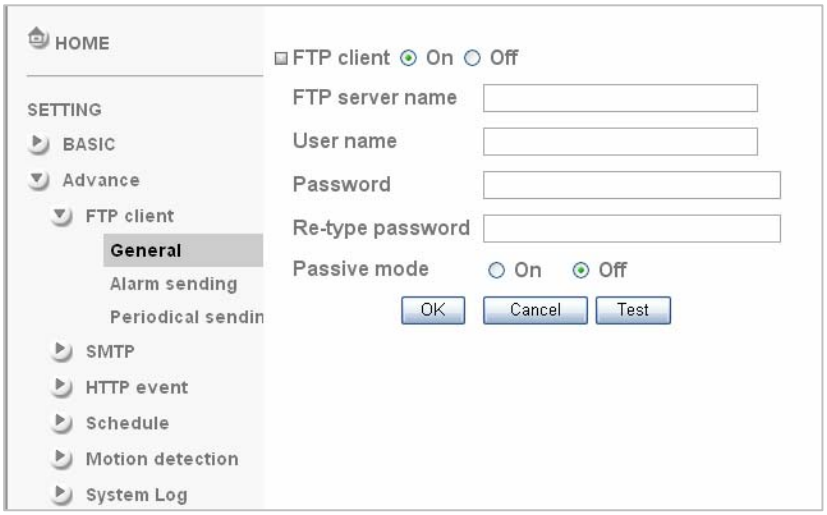

Select "**On"** when you use FTP function. The FTP client setting page appears. Select "**Off",** when you do not wish to use the FTP client function.

Note:
The frame rate and operability on the main viewer may decrease while a file is being transmitted by the FTP client function.

- **FTP server name**: Type the FTP server name to upload still images up to 64 characters, or the IP address of the FTP server.
- **User name**: Type the user name for the FTP server.
- **Password**: Type the password for the FTP server.

- **Retype password**: To confirm the password, type the same characters as you typed in the Password box.
- **Passive mode**: Set whether you use the passive mode of FTP server or not when connecting to FTP server. Select **On** to connect to FTP server using the passive mode.

8.1.2. Alarm Sending

Set to forward the **image file** to the specified FTP server linked with the alarm detection by the built-in motion detection function. Select **On** to send the image file to FTP server linked with the alarm detection.

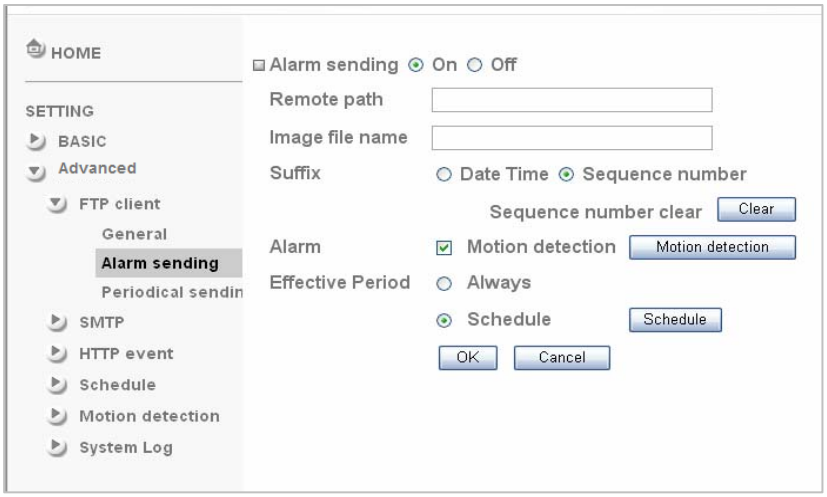

- **Remote Path**: Type the path to the destination in FTP server up to 64 characters.
- **Image File Name**: Type the file name you want to assign to the images when sending to the FTP server. You can use up to 10 alphanumeric characters, - (hyphen) and _ (underscore) for naming.
- **Suffix**: Select a suffix to add to the file name
  - **Date & time**: The date & time suffix is added to the Image file name. The date/time suffix consists of lower two-digits of year (2 digits), month (2 digits), date (2 digits), hour (2 digits), minute (2 digits), second (2 digits), and consecutive number (2 digits), thus 14-digit number is added to the file name.
  - **Sequence number**: A consecutive number of 10 digits between 0000000001 and 4294967295 and two fixed digits 00 is added to the Image file name.

●**Sequence number clear**: Click **Clear** and the suffix of the sequence number returns
to 1.

➢ **Alarm**

●**Motion Detection**: Click it on for using **Motion Detection** function as a sensor. You can set motion detection function at the motion detection function page.

Note:

You can set motion detection at motion detection page. (Please go "Setting → Advance →Motion Detection → Setting")

➢ **Effective period**: Set the period when the periodical sending is effective.

●**Always**: The periodical sending is always effective.

●**Schedule**: You can specify the period when the periodical sending is effective in the Schedule setting in the other section.

Note:

You can set schedule function at schedule page. (Please go "Setting → Advance → Schedule → Setting")

8.1.3. Periodical Sending

You can set to send an image file to FTP server periodically by selecting **On** to send the image file to FTP server linked with setting period.

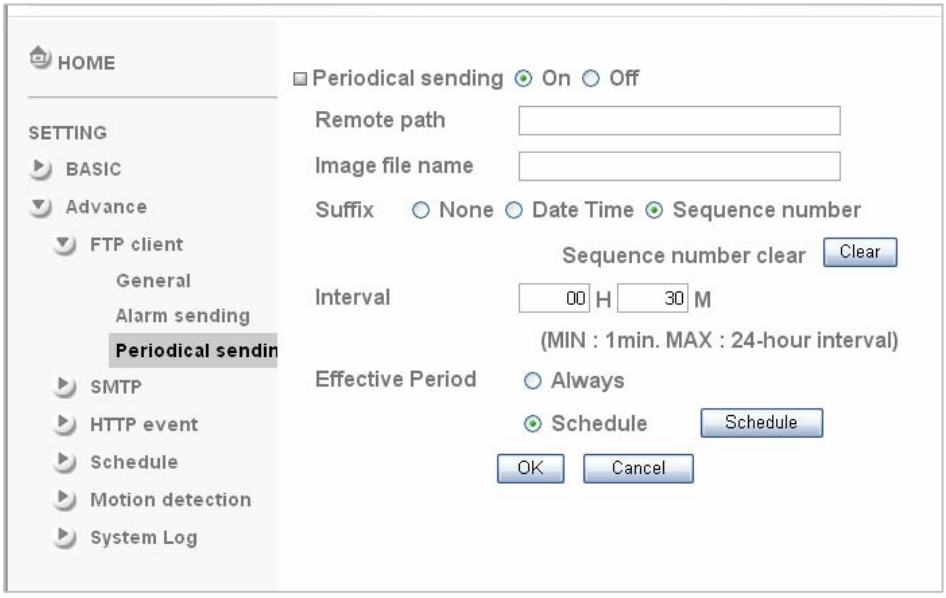

- **Image file name**: Type the file name of the image sent by SMTP up to 10 alphanumeric characters, - (hyphen) and _ (under score).
- **Suffix**: Select a suffix to be added to the file name sent by SMTP.
  - **None**: The name of the sent file will be the Image file name.
  - **Date & time**: The date & time suffix is added to the Image file name. The date & time suffix consists of lower two-digits of year (2 digits), month (2 digits), date (2 digits), hour (2 digits), minute (2 digits) and second (2 digits), and consecutive number (2 digits), thus 14-digit number is added to the file name.
  - **Sequence number**: A **consecutive** number is added to the Image file name.
  - **Sequence number clear**: Click **Clear** and the suffix of the sequence number returns to 1.

- **Interval**: Set the periodical sending is effective interval. Min value is 1 min and Max value is 24 hour.

- **Effective period**: Set the period when the periodical sending is effective.
  - **Always**: The periodical sending is always effective.
  - **Schedule**: You can specify the period when the periodical sending is effective in the Schedule setting in the other section.

Note:

You can set schedule function at schedule page. (Please go "Setting → Advance → Schedule → Setting")

8.2. SMTP

Set the SMTP menu when you want to send an image via e-mail. By using Mail (SMTP) function, you can send a mail with attached **image file** which has been shot linked with the external sensor input or with the built-in motion detection function. The image file can also be sent periodically. E-Mail (SMTP) setting menu is composed of three tabs, **General**, **Alarm sending** and **Periodical sending**.

8.2.1. General

Select **On** when you use the SMTP function. The common setting options are displayed below. Select **Off,** if you do not wish to use the e-Mail (SMTP) function.

Note :
The Setting of general part will be the same as the setting of IP Notification (Please check "Setting → Basic → Network → IP Notification")

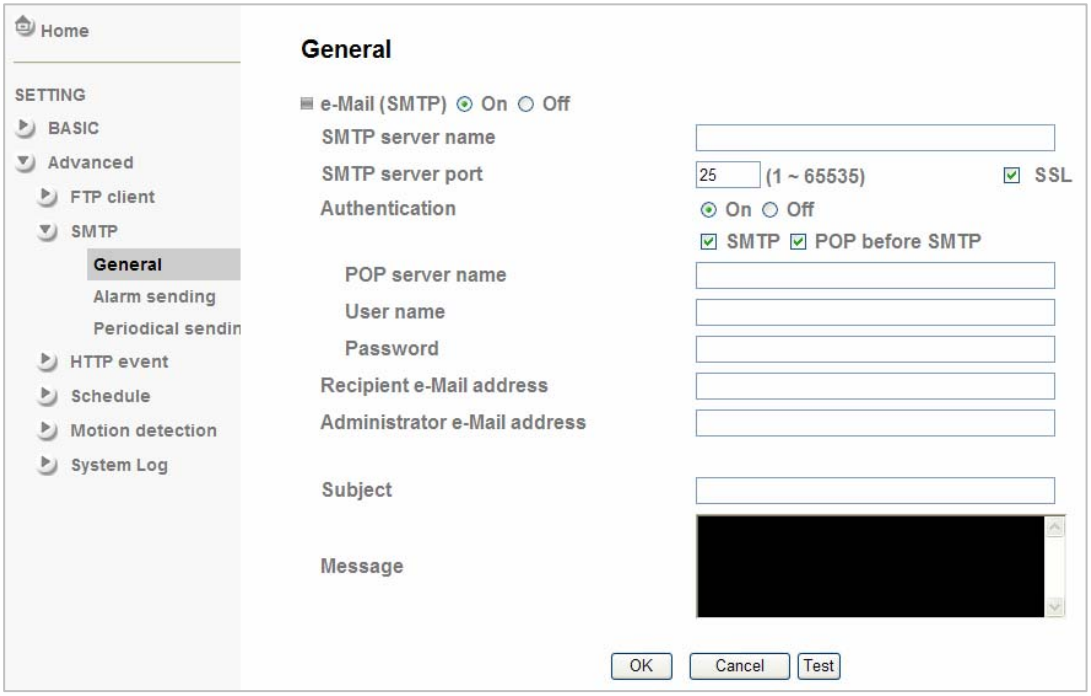

➢ **SMTP server name**: Type the SMTP server name up to 64 characters, or the IP address of the SMTP server.

➢ **SMTP Server Port**: You can set port number from 1~65535 according to your mail server. The default value is 25.

●**Security setting**: Tick SSL box if the mail server you use has security restriction.

Note:

If you use g-mail as your mail server, you should set 587 as your port number and tick SSL box.

➢ **Authentication**: Select the authentication required when you send an email.

●Off: Select if no authentication is necessary when an email is sent.

●On: When authentication is necessary an e-mail is sent, select one of the authentication methods from the followings.

➢ **SMTP**: Select if SMTP authentication is necessary when an e-mail is sent.

➢ **POP before SMTP**: Select if POP before SMTP authentication is necessary when an e-mail is sent.

Note：

When you set to On, be sure to select either or both SMTP or / and POP before SMTP.

●**POP server name**: It is necessary when the **POP before SMTP** is selected in **Authentication**. Type the POP (receiving mail) server name up to 64 characters, or type the IP address of the POP server. This setting is necessary when the SMTP server which sends e-mails performs authentication using the POP user account.

●**User name, Password**: Type the user name and Password of the user who has the mail account. This setting is necessary when the SMTP server which sends e-mails performs authentication.

➢ **Recipient e-mail address**: Type the recipient e-Mail address up to 64 characters. You can specify up to three recipient E-mail addresses.

➢ **Administrator e-mail address**: Type the Administrator e-Mail address up to 64 characters. This address is used for reply mail and sending system messages from the SMTP server.

➢ **Subject**: Type the subject/title of the e-Mail up to 64 characters. With respect to mail which is sent according to the alarm detection when **Alarm sending** of the alarm tab is set to **On**, the characters standing for the sensor type added to the subject.

➢ **Message**: Type the text of the E-mail up to 384 characters. (A line break is equivalent to 2 characters.)

8.2.2. Alarm Sending

Set to send the mail with connection to the alarm detection by the built-in motion detection function. Select On to send the image file to SMTP server linked with the alarm detection.

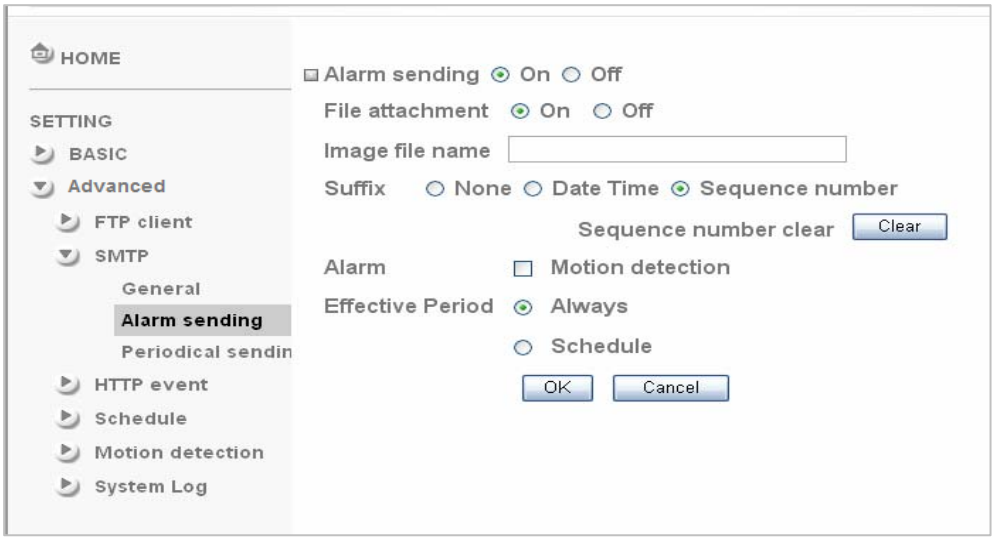

- **Alarm sending**: Select **On** to set to send mail with connection to the alarm detection.

- **File attachment**: Set whether an image file is attached to the mail sent or not. When **On** is selected, the image file made by the settings below is attached. When **Off** is selected, only the message is sent.

- **Image file name**: Type the file name you want to assign to the image to attach a mail. You can use up to 10 alphanumeric, - (hyphen) and _ (underscore) for naming.

- **Suffix**: Select a suffix to add to the file name
  - **Date & time**: The date & time suffix is added to the Image file name. The date/time suffix consists of lower two-digits of year (2 digits), month (2 digits), date (2 digits), hour (2 digits), minute (2 digits), second (2 digits), and consecutive number (2 digits), thus 14-digit number is added to the file name.
  - **Sequence number**: A consecutive number of 10 digits between 0000000001 and 4294967295 and two fixed digits 00 is added to the Image file name.
  - **Sequence number clear**: Click **Clear** and the suffix of the sequence number returns

to 1.

➢ **Alarm**

●**Motion Detection**: Click it on for using **Motion Detection** function as a sensor. You can set motion detection function at the motion detection function page.

Note:

You can set motion detection at motion detection page. (Please go "Setting → Advance → Motion detection → Setting")

➢ **Effective period**: Set the period when the periodical sending is effective.

●**Always**: The periodical sending is always effective.

●**Schedule**: You can specify the period when the periodical sending is effective in the Schedule setting in the other section.

Note:

You can set schedule function at schedule page. (Please go "Setting → Advance → Schedule → Setting")

8.2.3. Periodical Sending

You can set to send an image file by SMTP server periodically by selecting **On** to send the image file by SMTP server linked with setting period.

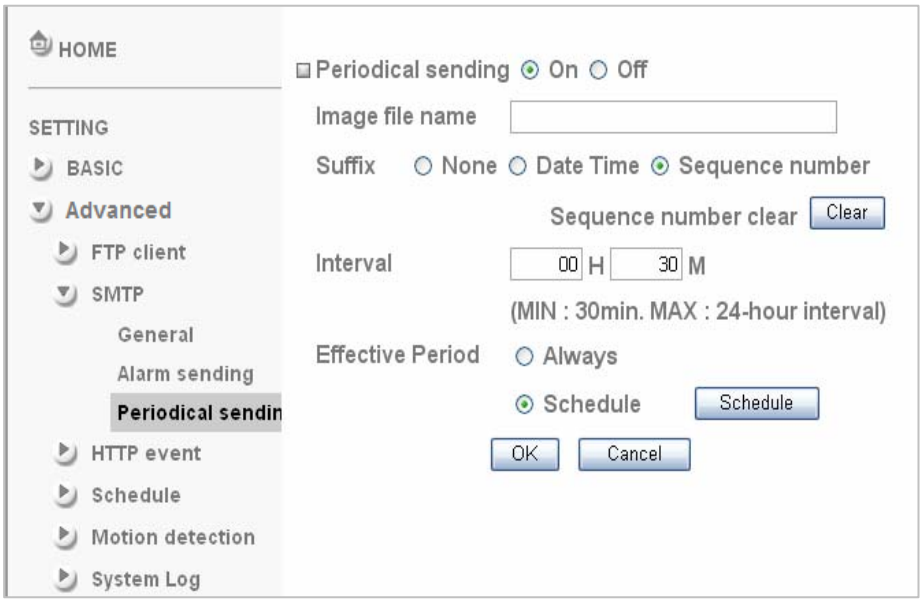

- **Image file name**: Type the file name of the image sent by SMTP up to 10 alphanumeric characters, - (hyphen) and _ (under score).
- **Suffix**: Select a suffix to be added to the file name sent by SMTP.
  - **None**: The name of the sent file will be the Image file name.
  - **Date & time**: The date & time suffix is added to the Image file name. The date & time suffix consists of lower two-digits of year (2 digits), month (2 digits), date (2 digits), hour (2 digits), minute (2 digits) and second (2 digits), and consecutive number (2 digits), thus 14-digit number is added to the file name.
  - **Sequence number**: A consecutive number is added to the Image file name.
  - **Sequence number clear**: Click **Clear** and the suffix of the sequence number returns to 1.
- **Interval**: Set the periodical sending is effective interval. Min value is 30 min and Max value is 24 hour.
- **Effective period**: Set the period when the periodical sending is effective.
  - **Always**: The periodical sending is always effective.
  - **Schedule**: You can specify the period when the periodical sending is effective in the schedule setting in the other section. **Please check "Setting → Basic → Advance → Schedule → Setting."**

Note:

You can set schedule function at schedule page. (Please go "Setting → Advance → Schedule → Setting")

8.3. HTTP EVENT

Set up this menu for sending commands to an HTTP server. By using HTTP client function, you can send the command defined by yourself**,** linked with the external sensor input or with the built-in motion detection function to HTTP server. HTTP Event setting menu is composed of two tabs, **General** and **Alarm sending.** Select On, and you can start setting up the function.

8.3.1. General

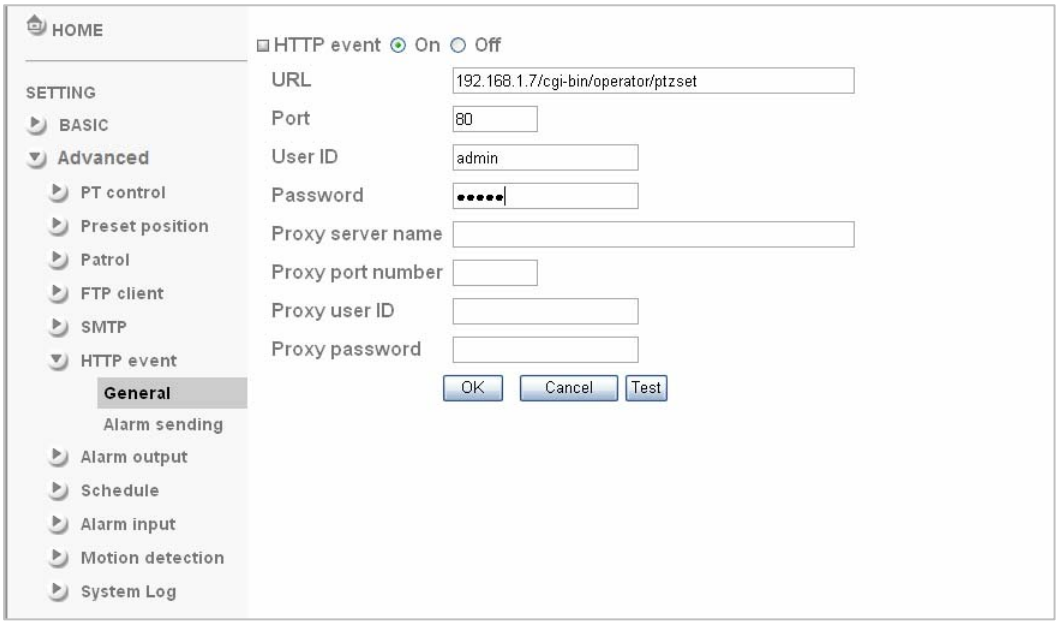

➢ **HTTP Event**: Set up the HTTP server URL, port, User ID, Password, and Proxy Server settings.

For example:
URL: 192.168.1.7/cgi-bin/operator/ptzset

Note:

The setting of URL should be the same as CGI

8.3.2. Alarm Sending

Set to send the commands via the alarm detection, external sensor input or built-in motion detection function. Select **On** to send the commands to HTTP server linked with the alarm detection.

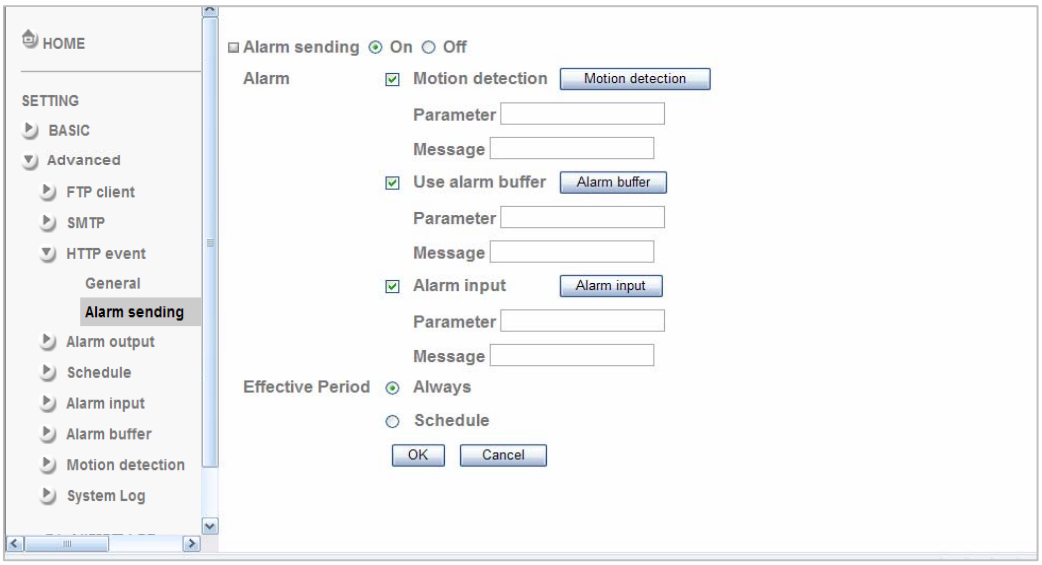

Alarm sending: Select **On** to set to send command with connection to the alarm detection.

➢ **Alarm**

- **Motion Detection**: Click it on for using **Motion Detection** function as a sensor. You can set motion detection function at the motion detection function page.

Note:

You can set motion detection at motion detection page. (Please go "Setting → Advance → Motion detection → Setting")

Note:

Motion Detection works only when the MPEG4 function is On.

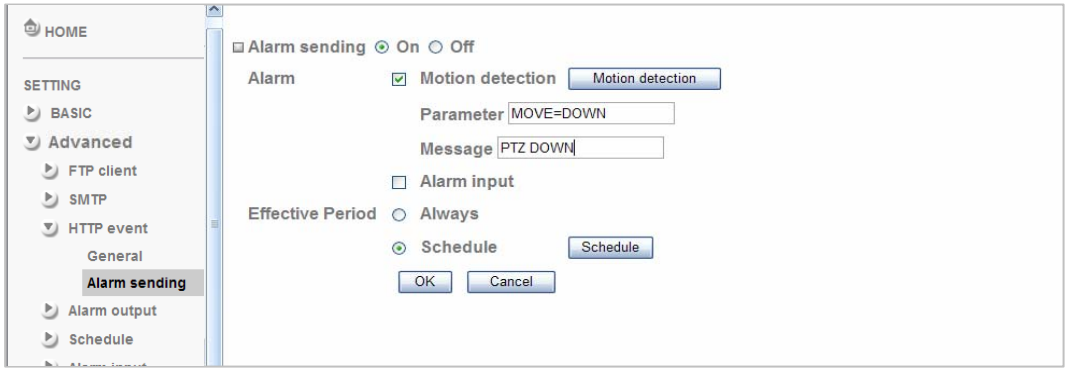

- ✓ **Parameter:** the parameter of CGI (defined in URL of HTTP → General) is from your target device. For example, move=down.
- ✓ **Message:** message will show up in the form of Message = PTZ down. If your target device didn't support the parameter of message, you can't see the message. So you can just take the message as a note. For example: PTZ down.

●**Use Alarm Buffer**: Select **Use alarm buffer** when you forward the image / audio of before and after the alarm detection (pre-alarm, post-alarm). If you do not select it, only the image of the moment of the alarm detection is forwarded. Click **Alarm buffer** to display the Alarm buffer setting menu.

Note:

You can set the alarm buffer function at alarm buffer page. (Please go "Setting → Advance → Alarm buffer → Setting")

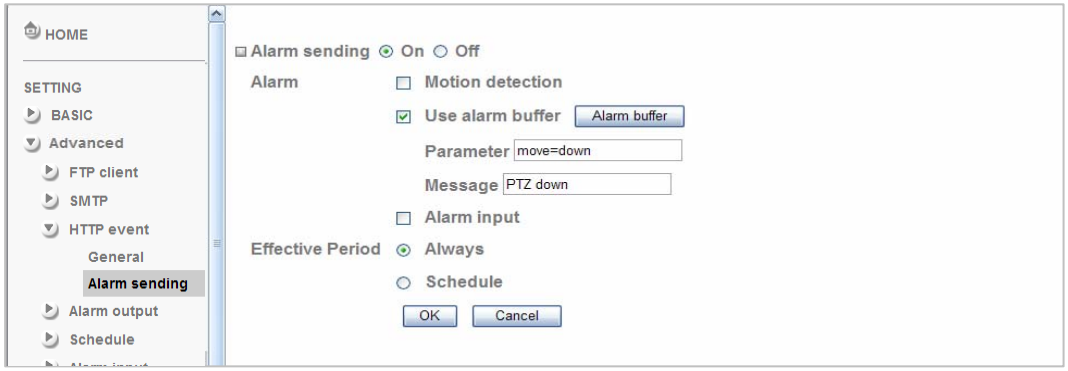

- ✓ **Parameter:** the parameter of CGI (defined in URL of HTTP→General) is from your target device. For example, move=down.
- ✓ **Message:** message will show up in the form of Message = PTZ down. If your target device didn't support the parameter of message, you can't see the message. So you can just take the message as a note. For example: PTZ down.

●**Alarm Input:** Select the connected alarm. **Sensor input1**: The external sensor which is connected to sensor input1 of the alarm input.

Note:

You can set the alarm input function at alarm input page. (Please go "Setting → Advance → Alarm input → Setting")

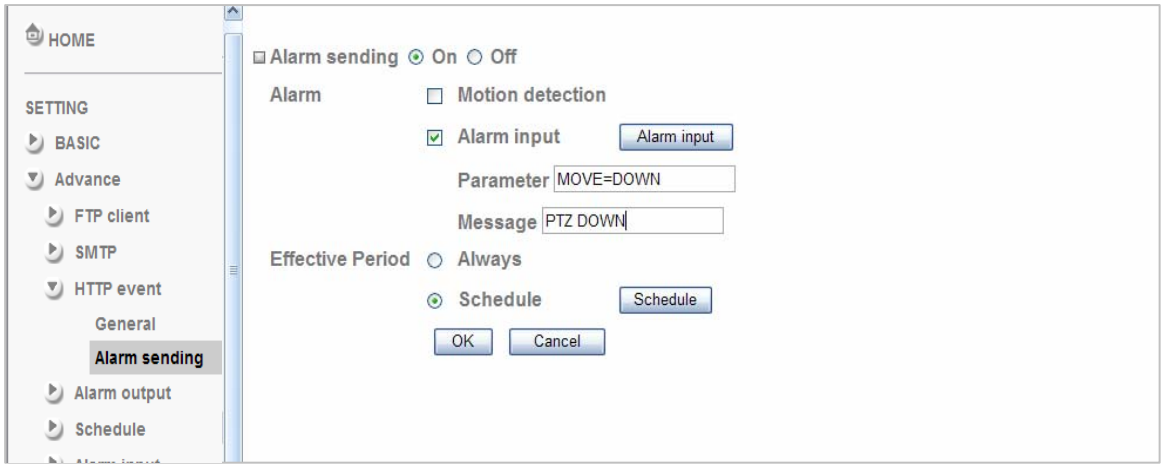

- ✓ **Parameter:** the parameter of CGI (defined in URL of HTTP→General) is from your target device. For example, move=down.
- ✓ **Message:** message will show up in the form of Message = PTZ down. If your target device didn't support the parameter of message, you can't see the message. So you can just take the message as a note. For example: PTZ down.

➢ **Effective period**: Set the period when the periodical sending is effective.

- ●**Always**: The periodical sending is always effective.
- ●**Schedule**: You can specify the period when the periodical sending is effective in the Schedule setting in the other section.

Note:

You can set schedule function at schedule page. **(Please go "Setting → Advance → Schedule → Setting")**

8.4. ALARM OUTPUT

When you click **Alarm output** on the Advanced mode menu, the Alarm output setting menu appears. You can set in this menu to control the alarm out of I / O port on the rear of the device linked to the alarm detection and the timer.

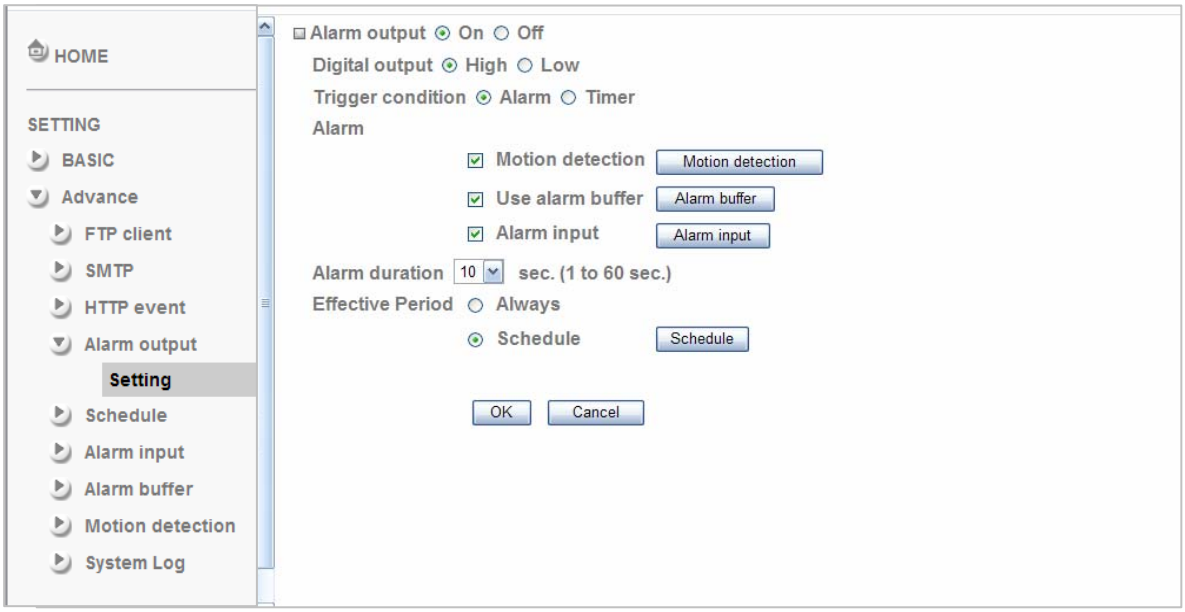

Alarm output: To activate the Alarm output function, select **On**. When you do not use the Alarm output function, select **Off**.

- **Digital output**: Select High signal output and Low signal output as your alarm.
- **Trigger condition**: Select the mode of the Alarm output function. You can choose "**Alarm" or "Timer".**
- **Alarm:** Controls alarm output by synchronizing with an external sensor input or the built-in activity detection function.
  - **Motion Detection**: Click it on for using **Motion Detection** function as a sensor. You can set motion detection function at the motion detection function page.

Note:

You can set motion detection at motion detection page. (Please go "Setting → Advanced → Motion detection → Setting")

Note：Motion Detection works only when the Video mode is set to MPEG4

and the Cropping is set to Off.

- **Use Alarm Buffer**: Select **Use alarm buffer** when you forward the image / audio of before and after the alarm detection (pre-alarm, post-alarm). If you do not select it, only the image of the moment of the alarm detection is forwarded. Click **Alarm buffer** to display the Alarm buffer setting menu.

Note:

You can set the alarm buffer function at alarm buffer page. (Please go "Setting → Advanced → Alarm buffer →Setting ")

- **Alarm Input:** Select the connected alarm. **Sensor input1**: The external sensor which is connected to sensor input1 of the alarm input.

Note:

You can set the alarm input function at alarm input page. (Please go "Setting →Advanced →Alarm input → Setting")

➢ **Alarm Duration**: There are up to 60 second options to choose for alarm duration interval.

➢ **Effective period**: Set the period when the periodical sending is effective.

- **Always:** The periodical sending is always effective.
- **Schedule**: You can specify the period when the periodical sending is effective in the Schedule setting in the other section.

Note:

You can set schedule function at schedule page. (Please go "Setting → Advanced → Schedule → Setting")

8.5. SCHEDULE

When you click **Schedule** on the Advance mode menu, the Schedule setting menu appears. This is the same menu as the setting menu which is displayed when you click **Schedule** to set Effective period and Schedule in **FTP** client setting menu, and E-Mail (**SMTP**) setting menu.

Example: When setting e-Mail (SMTP) (the alarm sending) in the Schedule setting menu.

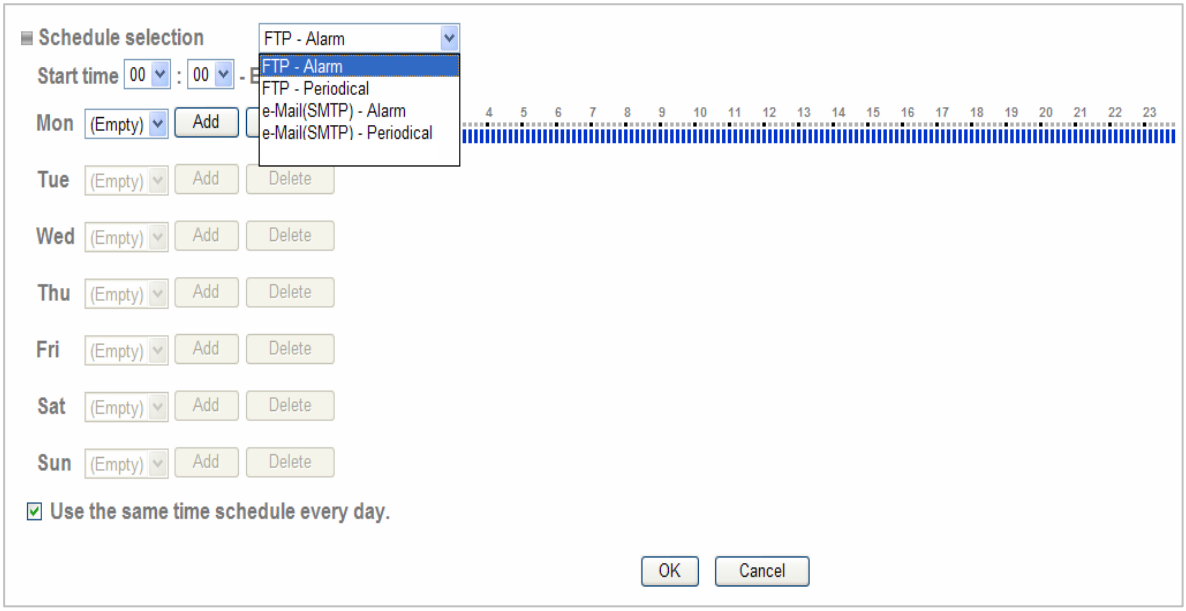
Schedule selection
FTP - Alarm
FTP - Alarm
FTP - Periodical
e-Mail(SMTP) - Alarm
e-Mail(SMTP) - Periodical
Start time 00 : 00
Mon (Empty) Add
Tue (Empty) Add Delete
Wed (Empty) Add Delete
Thu (Empty) Add Delete
Fri (Empty) Add Delete
Sat (Empty) Add Delete
Sun (Empty) Add Delete
4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23
Use the same time schedule every day.
OK
Cancel

➢ **Schedule Selection**: Select the list box to specify the schedule you want to set.

- **FTP -Alarm**
- **FTP - Periodical**
- **e-Mail (SMTP) -Alarm**
- **e-Mail (SMTP) -Periodical**

➢ **Mon (Monday) to Sun (Sunday)**: The time period on the right of the checked day is the effective period of the schedule.

➢ **Start time, End time**: Specify the **Start time** and the **End time**.

➢ **Use the same time schedule every day:** When this is checked, the **Start time** and **End time** set to **Mon** (Monday) are applied to all days. In this case, the **Start time** and **End time** of the other days than **Mon** (Monday) cannot be input.

8.6. ALARM INPUT

When you click **Alarm Input** on the Advanced mode menu, the Alarm input setting menu appears. You can set in this menu to control the external alarm input of I / O port on the rear of the device linked to **FTP, SMTP, and HTTP sending function.**

Sensor input 1: Click it on for using external sensor which is connected to sensor input1 of the camera I / O port.

- **Trigger condition**: Select High signal output and Low signal output as your alarm.
- **Camera move**: Pull down the window to select the camera preset position.

8.7. ALARM BUFFER

You can set the Pre-alarm image and audio (the image and audio before the alarm detection) and the Post - alarm image and audio. These can be set when **Alarm sending** FTP client setting menu or Image memory setting menu is set to **On**, and besides when **Use alarm buffer** is selected.

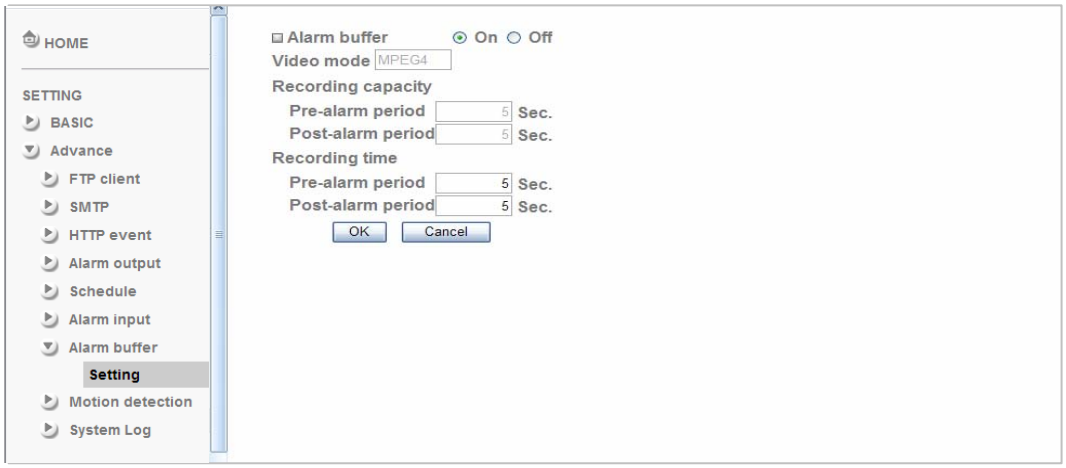

Alarm buffer: To activate the Alarm buffer function, select **On**. The basic setting options are displayed below. When you do not use the Alarm output function, select **Off**.

➢ **Recording capacity**

●**Pre-alarm period**: Display the maximum recording capacity of image/audio before the alarm detection.

●**Post-alarm period**: Display the maximum recording capacity of image/audio after the alarm detection.

➢ **Recording time**: Set the recording time for the Pre-alarm image/audio and Post alarm image/audio.

●**Pre alarm period**: Type it with recording time of the image/audio before the alarm detection.

●**Post alarm period**: Type it with recording time of the image/audio after the alarm detection.

Note：The value of Recording capacity differs depending on Image size, Bitrate (for MPEG4) and Image quality (for MPEG4 and MJPEG) in the camera setting menu.

8.8. MOTION DETECTION

There are three Motion Detection functions as sensors to set for different detecting zones. Each one has Threshold and Sensitivity inputs which you can adjust to specific zone sequentially. Motion Detection function can support to FTP, SMTP and Alarm output for capturing and sending images or starting alarm output.

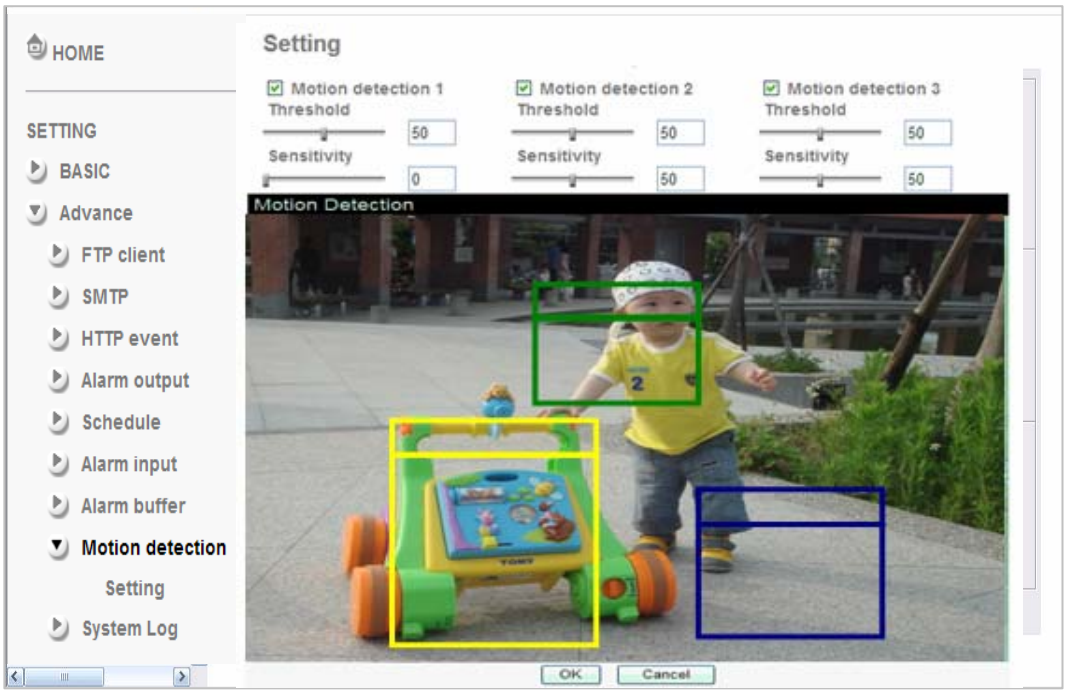

➢ **Threshold**: It means the extent which the alarm will be triggered.

➢ **Sensitivity:** It means that how often the sensor will scan the image different. The higher sensitivity it is and the more frequently it scans.

- **Motion Detection 1**: Click it on for using **Motion Detection 1** function as a sensor. You can adjust and move the detecting zone by using mouse.
- **Motion Detection 2**: Click it on for using **Motion Detection 2** function as a sensor. You can adjust and move the detecting zone by using mouse.
- **Motion Detection 3**: Click it on for using **Motion Detection 3** function as a sensor. You can adjust and move the detecting zone by using mouse.

8.9. SYSTEM LOG

The System Log function allows users to review any changes and events happened.
The system starts logging automatically after started.

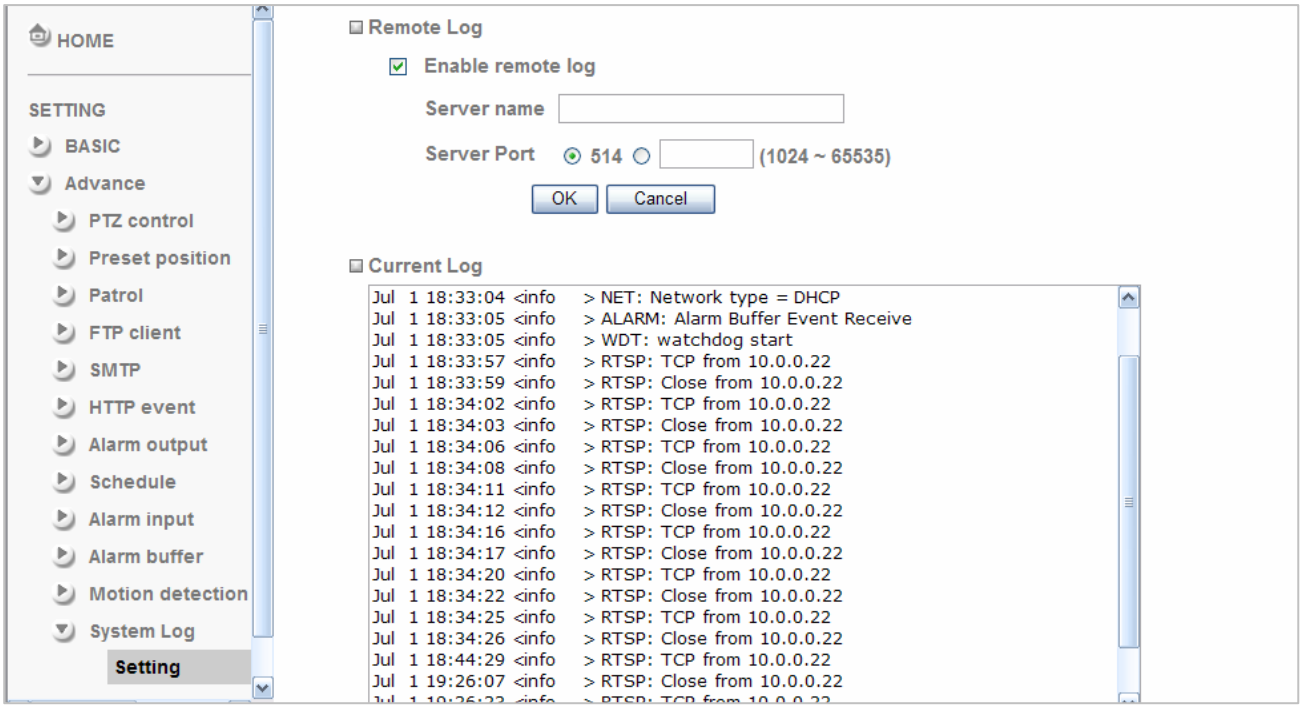

- **Enable remote log**: Enables user to send the log data to a specified log server.

APPENDIX

A. FRAME-RATE AND BITRATE TABLE

Help to set IPCamera with your network environment to access Internet.

Base on your network UPLOAD environment to choose the suitable Image-Quality setting. For example, if the network environment is ADSL 256Kb/s(upload) / 2Mb/s(download), the most fluent Image-Quality needs to set up under 256 Kb situation.

A.1. MPEG4 @ 30fps / Kbps

Quality	640*480	320*240	160*120
Excellent	**1000**	**300**	**90**
Detailed	**400**	**150**	**50**
Good	**300**	**100**	**30**
Standard	**250**	**70**	**25**
Medium	**250**	**55**	**20**

A.2. MPEG4 / Kbps, fps

Image-Size	Bitrate Setting	Frame-Rate Setting	Current Bitrate	Current Frame-Rate
640*480	2048	30	**1800**	**26**
640*480	2048	15	**2200**	**16**
640*480	1536	30	**1500**	**30**
640*480	1536	15	**1700**	**16**
640*480	1024	30	**1000**	**30**
640*480	1024	15	**1000**	**16**
640*480	512	30	**500**	**30**
640*480	512	15	**600**	**16**
320*240	1536	30	**1500**	**30**
320*240	1536	15	**1600**	**16**
320*240	1024	30	**1000**	**30**
320*240	1024	15	**1000**	**16**
320*240	512	30	**550**	**30**

320*240	512	15	**600**	**16**
160*120	1024	30	**950**	**30**
160*120	1024	15	**750**	**16**
160*120	512	30	**500**	**30**
160*120	512	15	**50**	**16**
160*120	128	30	**130**	**30**
160*120	128	15	**140**	**16**

A.3. MJPEG @ 15fps / Kbps

Quality	640*480	320*240	160*120
Excellent	**4000**	**1500**	**600**
Detailed	**2400**	**900**	**400**
Good	**1600**	**650**	**300**
Standard	**1300**	**500**	**240**
Medium	**900**	**350**	**170**

A.4. MJPEG / Kbps, fps

Image-Size	Quality Setting	Frame-Rate Setting	Current Bitrate	Current Frame-Rate
640*480	Excellent	15	**4000**	**13**
640*480	Excellent	5	**1600**	**5**
640*480	Good	15	**1600**	**13**
640*480	Good	5	**650**	**5**
640*480	Medium	15	**900**	**14**
640*480	Medium	5	**360**	**5**
320*240	Excellent	15	**1500**	**13**
320*240	Excellent	5	**550**	**5**
320*240	Good	15	**650**	**13**
320*240	Good	5	**260**	**5**
320*240	Medium	15	**350**	**13**
160*120	Medium	5	**130**	**5**
160*120	Excellent	15	**600**	**13**
160*120	Excellent	5	**230**	**5**
160*120	Good	15	**300**	**13**
160*120	Good	5	**115**	**5**
160*120	Medium	15	**170**	**13**
160*120	Medium	5	**65**	**5**

B. STORAGE REQUIREMENT TABLE

Help to set Recording Storage System. Please refer to the following table to find out the capability for recording into your hard disk.

B.1. MPEG4 Storage Requirement GB / channel / day @ 30fps

Quality	640*480	320*240	160*120
Excellent	**10.5**	**3.2**	**0.9**
Detailed	**4.2**	**1.6**	**0.5**
Good	**3.2**	**1.1**	**0.3**
Standard	**2.6**	**0.7**	**0.3**
Medium	**2.6**	**0.6**	**0.2**

B.2. MPEG4 Storage Requirement GB / channel / day @ 15fps

Quality	640*480	320*240	160*120
Excellent	**5.3**	**1.6**	**0.4**
Detailed	**2.1**	**0.8**	**0.3**
Good	**1.6**	**0.6**	**0.2**
Standard	**1.3**	**0.4**	**0.1**
Medium	**1.3**	**0.3**	**0.1**

B.3. MPEG4 Storage Requirement GB / channel / day

Image-Size	Bitrate Setting	Frame-Rate Setting	Current Bitrate
640*480	2048	30	**23.0**
640*480	2048	15	**22.2**
640*480	1536	30	**18.5**
640*480	1536	15	**17.9**
640*480	1024	30	**10.5**
640*480	1024	15	**10.5**
640*480	512	30	**5.3**
640*480	512	15	**6.3**
320*240	1536	30	**15.8**
320*240	1536	15	**16.9**
320*240	1024	30	**10.5**
320*240	1024	15	**10.5**
320*240	512	30	**5.8**

320*240	512	15	**6.3**
160*120	1024	30	**10.0**
160*120	1024	15	**7.9**
160*120	512	30	**5.3**
160*120	512	15	**0.5**
160*120	128	30	**1.4**
160*120	128	15	**1.5**

B.4. MJPEG Storage Requirement GB / channel / day @ 15fps

Quality	640*480	320*240	160*120
Excellent	**42.2**	**15.8**	**6.3**
Detailed	**25.3**	**9.5**	**4.2**
Good	**16.9**	**6.9**	**3.2**
Standard	**13.7**	**5.3**	**2.5**
Medium	**9.5**	**3.7**	**1.8**

B.5. MJPEG Storage Requirement GB / channel / day

Image-Size	Quality Setting	Frame-Rate Setting	Current Bitrate
640*480	Excellent	15	**42.2**
640*480	Excellent	5	**16.9**
640*480	Good	15	**16.9**
640*480	Good	5	**6.9**
640*480	Medium	15	**9.5**
640*480	Medium	5	**3.8**
320*240	Excellent	15	**15.8**
320*240	Excellent	5	**5.8**
320*240	Good	15	**6.9**
320*240	Good	5	**2.7**
320*240	Medium	15	**3.7**
160*120	Medium	5	**1.4**
160*120	Excellent	15	**6.3**
160*120	Excellent	5	**2.4**
160*120	Good	15	**3.2**
160*120	Good	5	**1.2**
160*120	Medium	15	**1.8**
160*120	Medium	5	**0.7**

C. TESTING SYSTEM SPECIFICATION

Software:	MainConsole Version 2.6.4 Professional
CPU:	AMD Athlon 64*2 @3600+MHz
Memory:	2048 MB (2 x 1024 DDR2-SDRAM)
Ethernet:	VIA Rhine II Fast Ethernet Adapter
Hard Disk:	ST3250620A (250 GB)
Graphic card:	ATI Technologies Inc EAX1600 Series
Operating System:	Windows XP Professional SP2 x64

D. D1 PERFORMANCE OF 16 CHANNEL IP CAMERA

Results from Test with a Resolution of 704×480 CCD IPCamera

704x480	Quality	Frame Rate	CPU Load	Bandwidth
16 IP camera	Excellent	30	95%	15~20 Mbps

Results from Test with a Resolution of 640×480 CMOS IPCamera

640x480	Quality	Frame Rate	CPU Load	Bandwidth
16 IP camera	Excellent	30	95%	10~15 Mbps

EUROPE – EU DECLARATION OF CONFORMITY

This device complies with the essential requirements of the R&TTE Directive 1999/5/EC. The following test methods have been applied in order to prove presumption of conformity with the essential requirements of the R&TTE Directive 1999/5/EC:

Clause	Description
EN 60950-1: 2001	Safety of Information Technology Equipment
EN 50392: 2004	Generic standard to demonstrate the compliance of electronic and electrical apparatus with the basic restrictions related to human exposure to electromagnetic fields (0 Hz - 300 GHz)
EN 300 328 V1.6.1 (2004-11)	Electromagnetic compatibility and Radio spectrum Matters (ERM); Wideband transmission systems; Data transmission equipment operating in the 2,4 GHz ISM band and using wide band modulation techniques; Harmonized EN covering essential requirements under article 3.2 of the R&TTE Directive
EN 301 489-17 V1.2.1 (2002-08) and EN 301 489-1 V1.5.1 (2004-11)	Electromagnetic compatibility and Radio spectrum Matters (ERM); ElectroMagnetic Compatibility (EMC) standard for radio equipment and services; Part 17: Specific conditions for 2,4 GHz wideband transmission systems and 5 GHz high performance RLAN equipment

This device is a 2.4 GHz wideband transmission system (transceiver), intended for use in all EU member states and EFTA countries, except in France and Italy where restrictive use applies.

In Italy the end-user should apply for a license at the national spectrum authorities in order to obtain authorization to use the device for setting up outdoor radio links and/or for supplying public access to telecommunications and/or network services.

This device may not be used for setting up outdoor radio links in France and in some areas the RF output power may be limited to 10 mW EIRP in the frequency range of 2454 – 2483.5 MHz. For detailed information the end-user should contact the national spectrum authority in France.

FEDERAL COMMUNICATION COMMISSION

INTERFERENCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution:
Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

IEEE 802.11b or 802.11g operation of this product in the U.S.A. is firmware-limited to channels 1 through 11.

IMPORTANT NOTE:

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with

minimum distance 20cm between the radiator & your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.